

Installation Instructions

ADJUSTABLE RUNWAY


Warnings

1. To maintain the load rating of the runway, the cross members should be moved no more than 4" (4 holes) from the original position.

Moving Cross Members

1. Remove the two cross member screws using a T40 hexalobular driver.
2. Slide the cross member to the desired location (4" maximum).
Note: It may be necessary to loosen the screws on adjacent cross members.
3. Additional cross members (Crossmember Kit 14302) may be added if needed. It will be necessary to loosen the screws on existing cross members in the area where the extra cross member is being added.
4. Reinstall screws and torque to 177 In-Lbs [20 N-M].

Note: The square holes on the runway stringer indicate the standard 12" cross member spacing locations.

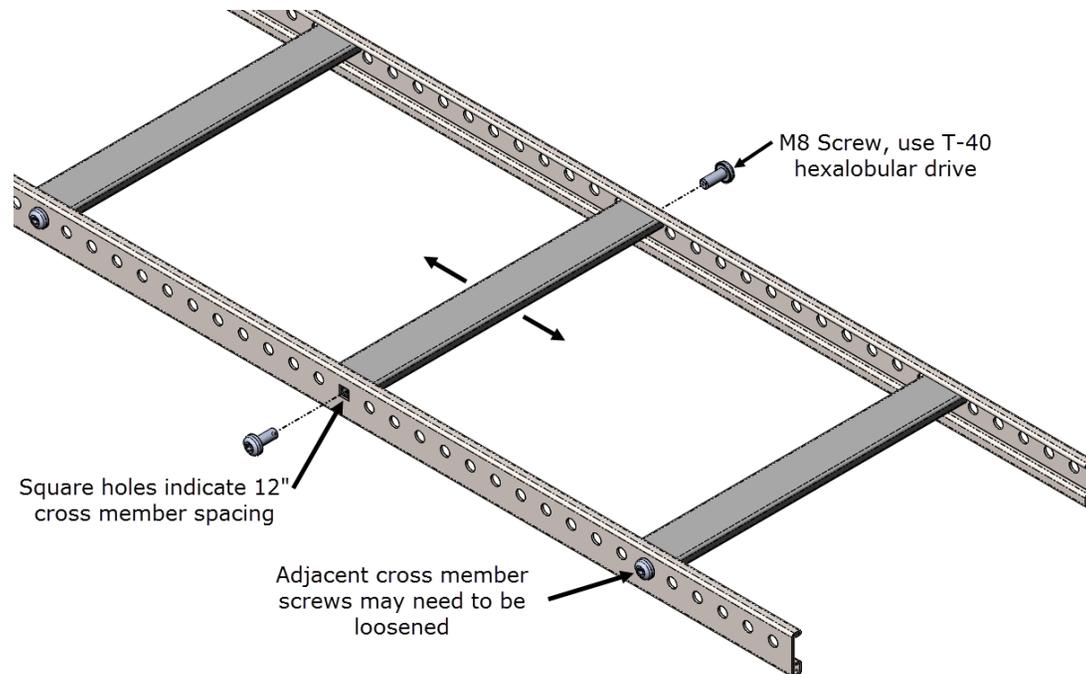

IIS-714300, 09/28/15, Rev. 1, CPI/BDK
800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com
For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.