

Installation Instructions

Equipment Rails, Floor Standing CUBE-iT



WARNING: Failure to properly install equipment rails can result in improper rail grounding. Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.


Intended Use

Install this rack only in a restricted service environment, such as a data center. Use indoors only, in environmentally controlled areas; do not use outdoors, in harsh environments or in air-handling spaces. Use this rack for computer equipment, including servers and peripherals. Allow only qualified service personnel to use this rack.

Tools Required

10mm Socket wrench



Included Hardware

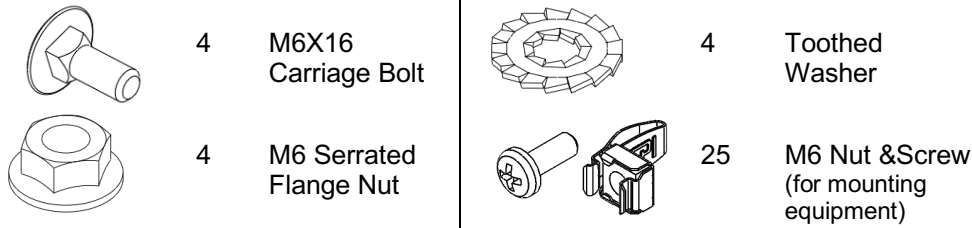

Assembly Sequence

Position the rails in the frame with RMU #1 marking at lowest position, desired rail setback. Minimum rail setback is 1.77 IN [45MM] if optional finger manager is installed.

Use M6 carriage bolt, toothed washer and serrated flange nut as shown in Figure 1 to attach equipment rail to frame. Locate toothed washer adjacent to the head of the M6 carriage bolt. Torque nuts to 88IN-LB [9.9] N-M

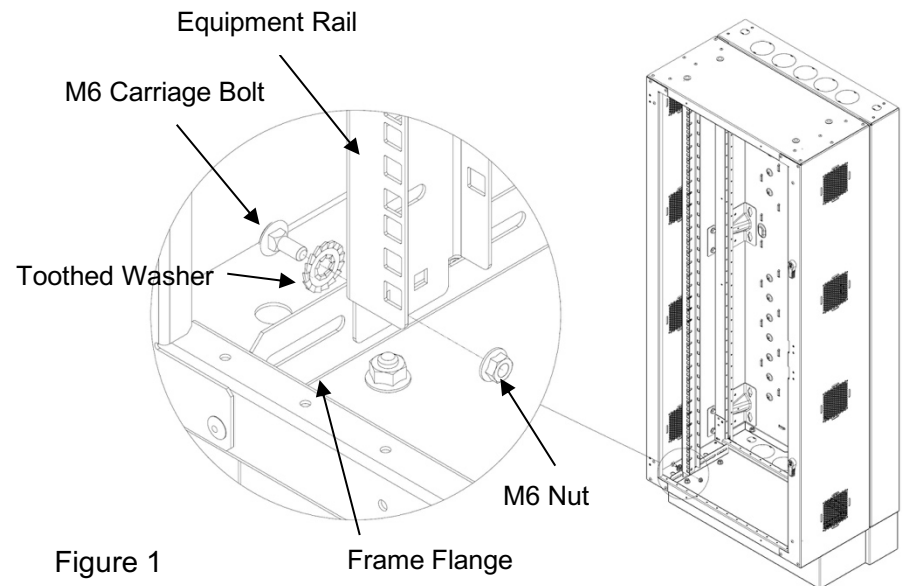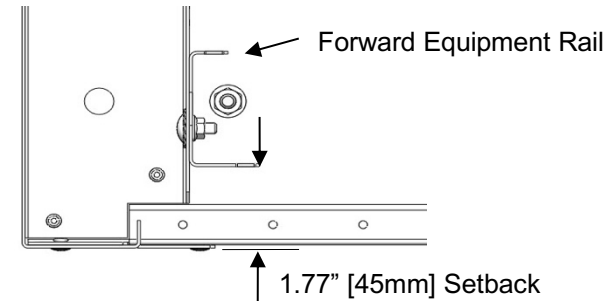

IIS-739905-001, 09/12/18, Rev. 1, CPI/REL
800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com
For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.