

Installation Instructions

Lashing Bracket, Floor Standing CUBE-iT



WARNING: Failure to properly install lashing brackets can result in improper grounding. Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.


Intended Use

Install the lashing bracket only in a restricted service environment, such as a data center. Use indoors only, in environmentally controlled areas; do not use outdoors, in harsh environments or in air-handling spaces. Use this rack for computer equipment, including servers and peripherals. Allow only qualified service personnel to use this rack.

Tools Required

10mm Socket wrench

Included Hardware

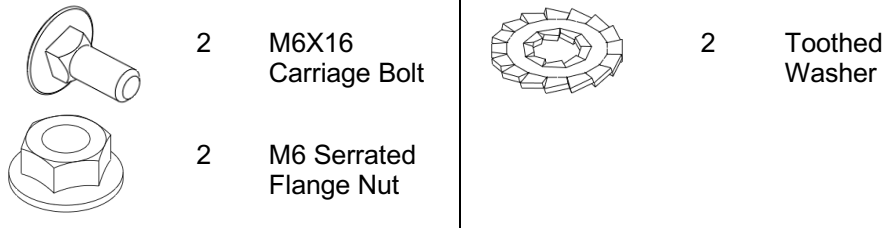

Assembly Sequence

Position the lashing bracket in the frame with as shown in Figure 1.

Use M6 carriage bolt, toothed washer and serrated flange nut as shown in Figure 1 to attach the lashing bracket to frame. Locate toothed washer adjacent to the head of the M6 carriage bolt. Torque nuts to 88IN-LB [9.9] N-M

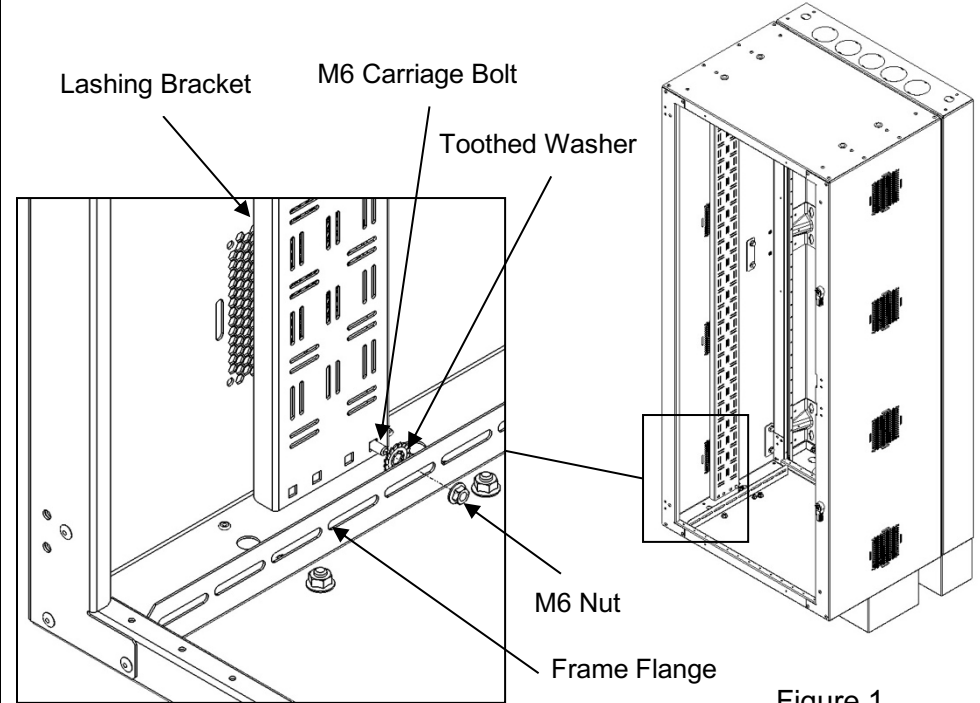


Figure 1



IIS-739906-001, 09/12/18, Rev. 1, CPI/REL
800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com
For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.