

# User Manual for eConnect® PDU and Electronic Lock Kit

Reference Sales Model EA-XXXX  
Regulatory Model K-XXXX

Version 7  
June 2023



**CHATSWORTH  
PRODUCTS**

800-834-4969  
chatsworth.com  
techsupport@chatsworth.com

While every effort has been made to ensure the accuracy of all information, CPI does not accept liability for any errors or omissions and reserves the right to change information and descriptions of listed services and products.

©2023 Chatsworth Products, Inc. All rights reserved. Chatsworth Products, Clik-Nut, CPI, CPI Passive Cooling, CUBE-IT, eConnect, Evolution, GlobalFrame, MegaFrame, Motive, QuadraRack, RMR, Saf-T-Grip, Secure Array, SeismicFrame, SlimFrame, TeraFrame and Velocity are federally registered trademarks of Chatsworth Products.

EuroFrame, H-Plane, Hi-Bar, In-Plane, M-Frame, NetPoint, Oberon, Simply Efficient Skybar, Wi-Tile and ZetaFrame are trademarks of Chatsworth Products. All other trademarks belong to their respective companies. Rev.7 06/23 MKT-60020-720

## TABLE OF CONTENTS:

INTRODUCTION .....	3
PRODUCT FEATURES.....	4
PRODUCT LABELING AND CERTIFICATIONS .....	8
PDU MODELS .....	9
INSTALLATION CHECKLIST .....	10
INSTALLATION GUIDE.....	11
USING THE LOCAL DISPLAY .....	13
MONITORING PDU CONDITIONS.....	15
NETWORK CONFIGURATION .....	19
DISPLAY SETUP.....	22
PDU SETTINGS .....	23
UPDATE FIRMWARE .....	25
PDU MODEL INFORMATION.....	26
USING THE BUILT-IN WEB SERVER (GUI) APPLICATION .....	27
OUTLETS – GROUPS .....	35
CABINET ACCESS – OVERVIEW .....	36
CABINET ACCESS – SETTINGS.....	36
CABINET ACCESS – RADIUS CARD SETTINGS.....	37
LOGGING – OVERVIEW .....	38
LOGGING – EXPORT LOGS.....	39
LOGGING – SETTINGS.....	40
NOTIFICATIONS - THRESHOLDS.....	41
NOTIFICATIONS - ROUTING.....	42
SETTINGS – PDU .....	44
SETTINGS – PDU - CLONE .....	45
SETTINGS - ENVIRONMENTAL.....	46
SETTINGS – NETWORK .....	47
SETTINGS – SNMP .....	49
SETTINGS – EMAILS .....	50
ADMINISTRATION – USER MANAGEMENT .....	50
ADMINISTRATION – RADIUS AUTHENTICATION.....	53
ADMINISTRATION – LDAP AUTHENTICATION .....	52
ADMINISTRATION – ADVANCED .....	52
ADMINISTRATION – UPGRADE FIRMWARE.....	54
CONFIGURE IP ADDRESS USING SERIAL CONNECTION AND CLI .....	56
BUILT-IN SOFTWARE FEATURES.....	57
TROUBLESHOOTING GUIDE.....	58
REPLACING THE FIELD-REPLACEABLE CONTROLLER MODULE .....	60
SERVICE AND MAINTENANCE.....	61
APPENDIX.....	62

## INTRODUCTION

### User Manual for eConnect PDU and Electronic Lock Kit

This document is the User Manual for CPI eConnect Power Distribution Units (PDUs) (Sales Models EA-XXXX, Regulatory Model K-XXXX) and Electronic Lock Kit.

©2023 Chatsworth Products, Inc. All rights reserved.

UL Listed for use in U.S. and Canada.

### Legal Information

The information contained in this guide is subject to change without notice. Chatsworth Products, Inc. (CPI) shall not be liable for technical or editorial errors or omissions contained herein; nor is it liable for any injury, loss, or incidental or consequential damages resulting from the furnishing, performance or use of this material and equipment.

### Warranty

CPI warrants all CPI-branded hardware products to be free from defects in material and/or workmanship (CPI's Standard Limited Warranty) for a period of three (3) years following the date of purchase (the Original Warranty Period).

The customer must contact CPI in writing or by oral communication confirmed in writing within the Original Warranty Period to report a product that the customer claims is defective. CPI reserves the sole and absolute right to determine whether or not the product or any part thereof is defective. In the event a product (or any part thereof) is determined by CPI to be defective (an Accepted Claim), CPI will provide a re-manufactured or replacement product or part (the Replacement Product) at no cost to the customer and issue a Return Material Authorization (RMA) number.

### Extended Limited Warranty

CPI Extended limited warranties on CPI-Branded Electronic and Non-Electronic hardware products are available for two additional years beyond the expiration of the Original Warranty Period (3 years). CPI's Extended Limited Warranty can be purchased concurrently with, or separately from, the initial purchase of the product until the expiration of the Original Warranty Period for that product.

For more information on CPI Warranties, [visit the website](#).



### Nomenclature

**PDU:** eConnect Power Distribution Unit product

**Socket/Receptacle/Outlet:** Electrical output port

**Secure Array®:** Connects up to 48 PDUs (or 32 PDUs, if integrated with RFID electronic locks) under one IP address. A second connection provides failover capability, allowing linked PDUs to stay connected when one loses functionality.

**Locking Outlet:** PDUs with locking IEC C13 and C19 outlets that secure equipment power cords to vertical PDUs to prevent accidental disconnections.

**Primary Role:** The role that is assigned to the PDU that is attached to the network and serves as the beginning of the Secure Array. This PDU should have a level of functionality that is equal to or higher than that of all the remaining PDUs within the array. In an array with several PDUs with the highest level of

functionality, the PDU with the most outlets among this group should be assigned the Primary Role.

**Secondary Role:** The role assigned to a PDU that is 1) linked to the primary PDU, or 2) a standalone PDU.

**Alternate Role:** The role assigned to the PDU that is connected to the network to provide a backup network connection if the Primary Role PDU loses power. This PDU must be equivalent to the Primary PDU in functionality and number of outlets.

## PRODUCT FEATURES

### Vertically Mounted PDUs:

**Physical Dimensions:** refer to product cut sheet at [www.chatsworth.com](http://www.chatsworth.com)

**Input Voltage:**

100 – 415 Volts, varies by part number

**Output Voltage:**

100 – 240 Volts, varies by part number

**Input/Output Configurations:** Please refer to the cut sheet for the specific model available at [chatsworth.com](http://chatsworth.com)

**Power Input Cable:**

Length: Standard: 10 ft (3 m)

Gauge: 6 – 12 AWG, varies by part number

Plug type: Current, Voltage and Configuration dependent, varies by part number. Some PDUs have an IEC C20 Input.

**Circuit Breakers:**

Type: Single or Double Pole Electro-hydraulic UL489 listed Breakers  
Quantity: One, two, three or six, varies by part number

Rating: 20 Amp

**Receptacles:**

Types: NEMA, IEC, varies by part number

Quantity: Varies by part number


Rating: C13: 10 Amp, C19: 16 Amp; 5-20R: 16 Amp, varies by part number

**Mounting:**

Mounting style: 2 x Tool-less Buttons on the PDU rear cover

Distances: 61.25" (1556 mm) and 64.75" (1645 mm) apart

Positions: 4 mounting positions (A1, A2, B1, B2)

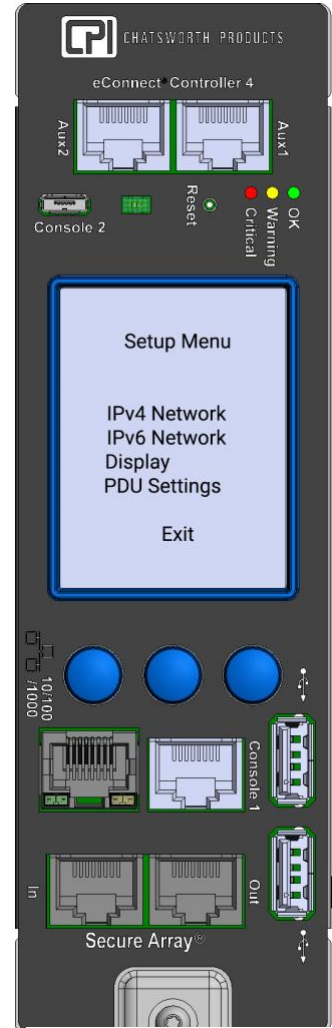

*Single-phase unit. Actual information displayed may vary depending on whether the unit is single- or three-phase.*

## Field-Replaceable Controller Module

The Field-Replaceable Controller Module can be replaced at the customer site without having to return the entire PDU

### LCD local display with push button control:

(currently not available on horizontal models)

Dimension: 1.5" x 2.0" (38 mm x 51 mm)

Resolution: 240 x 320

1

### Proprietary Auxiliary ports:

For Electronic Lock Kit or other peripherals

Connector type: (2) RJ45

Aux1: For rear door

Aux 2: For front door

2

### Console 2 port:

Console 2 is a Micro USB connection.

Same functions as Console 1.

*Note: This is the port used for CLI connection. For CLI connection you must use a standard YOST cable. Refer to [Appendix](#)*

3

### Status LED

4

### Ethernet port:

Connector type: (1) RJ45 Speed:

10/100/1000 Megabit/sec

Support: IPv6; IPv4; SNMP v1, v2, v3

*Note: If using the 10/100/1000MB Ethernet port at a 1000MB (Gigabit) speed, please use shielded Ethernet cables only.*

5

### Console 1 port:

RJ45 YOST serial connection.

The Console1 is typically connected via a Cable – RJ45 YOST connector (PDU) to a DB-9 connector (PC)

*Note: This is the port used for CLI connection. For CLI connection you must use a standard YOST cable. Refer to [Appendix](#)*

6

### USB ports

Quantity: 2 USB-A

Function: CPI Firmware upgrades

Temp/Humidity sensor will be plugged into either standard USB1 or USB2 port

### Secure Array/PDU Linking/Serial Port:

7

Connector type: (2) RJ45

(1) link-in/serial port

8

(1) link-out port for Secure Array PDU linking using a Cat 5/6 cable



## **Horizontally Mounted PDUs:**

**Physical Dimensions:** refer to product data sheet at [chatsworth.com](http://chatsworth.com)

**Input Voltage:**

100 – 415 Volts, varies by part number

**Output Voltage:**

100 – 240 Volts, varies by part number

**Input/Output Configurations:** Please refer to the cut sheet for the specific model available at [chatsworth.com](http://chatsworth.com)

**Power Input Cable:**

Length: Standard: 10' (3 m)

Gauge: 6 – 12 AWG, varies by part number

Plug type: Current, Voltage and Configuration dependent, varies by part number.

Some PDUs have an IEC C20 Input.

**Circuit Breakers:**

Type: Single or Double Pole Electro-hydraulic UL489 listed Breakers Quantity:

One, two, three or six, varies by part number

Rating: 20 Amp

**Receptacles:**


Types: NEMA, IEC, varies by part number

Quantity: Varies by part number

Rating: C13: 10 Amp, C19: 16 Amp; 5-20R: 16 Amp, varies by part number

**Mounting:**

Mounting style: 19" EIA mounting brackets attach to cabinet or rack equipment mounting rails.

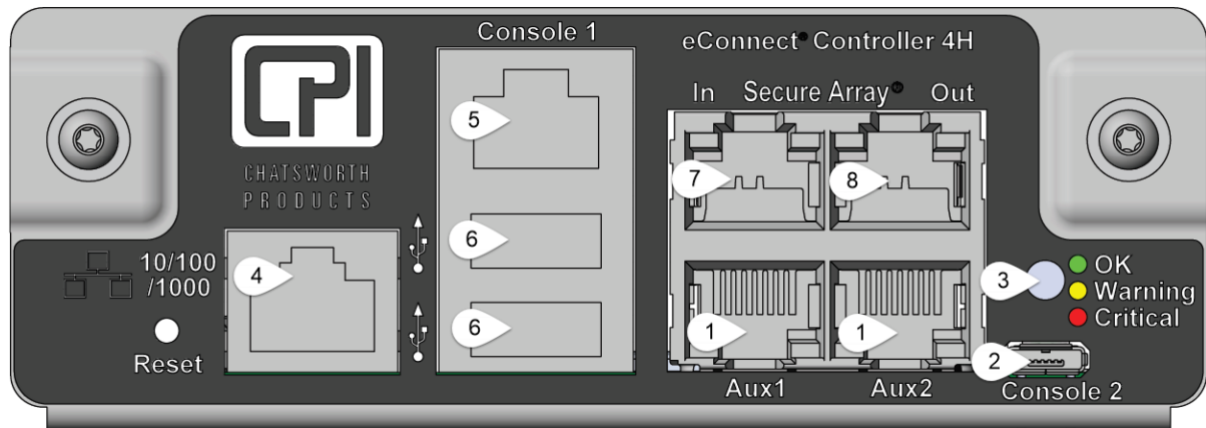

### Field-Replaceable Controller Module

The field-replaceable controller module can be replaced at the customer site without having to return the entire PDU

#### 1 Proprietary Auxiliary ports: For Electronic Lock Kit or other peripherals

Connector type: (2) RJ45  
 Aux1: For rear door  
 Aux 2: For front door

#### 2 Console 2 port: Console 2 is a Micro USB connection.

Same functions as Console 1.

*Note: This is the port used for CLI connection. For CLI connection you must use a standard YOST cable. Refer to [Appendix](#)*

#### 3 Status LED

#### 4 Ethernet port: Connector type: (1) RJ45 Speed: 10/100/1000 Megabit/sec

Support: IPv6; IPv4; SNMP v1, v2, v3

*Note: If using the 10/100/1000MB Ethernet port at a 1000MB (Gigabit) speed, please use shielded Ethernet cables only.*

*Before connecting the PDU to the network, view the [Network Configuration Page](#) for instructions.*

#### 5 Console 1 port: RJ45 YOST serial connection.

The Console1 is typically connected via a Cable – RJ45 YOST connector (PDU) to a DB-9 connector (PC)

*Note: This is the port used for CLI connection. For CLI connection you must use a standard YOST cable. Refer to [Appendix](#)*

#### 6 USB ports

Quantity: 2 USB-A

Function: CPI Firmware upgrades





Temp/Humidity sensor will be plugged into either standard USB1 or USB2 port

#### Secure Array/PDU Linking/Serial Port:

Connector type: (2) RJ45  
 (1) link-in/serial port

(1) link-out port for Secure Array PDU linking using a Cat 5/6 cable

## PRODUCT LABELING AND CERTIFICATIONS

	<p>The presence of the CE Mark on equipment means that it has been designed, tested and certified as complying with all applicable European Union (CE) regulations and recommendations.</p>
	<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>
	<p>Samples of this product met UL's safety requirements for US and Canada.</p>
	<p>Do not dispose this product as unsorted municipal waste.</p>



# PDU MODELS

Functionality	Basic Power Distribution	Inlet Metering	Branch Circuit Metering	Networking	Access Control	Outlet Metering	Switched Outlets
<b>Basic</b> - Simple, reliable power distribution to equipment in your cabinets. Select a Basic PDU when no power monitoring is required.	✓						
<b>Metered</b> - Includes local LED display for easy reading of input current across phases. Selected a Metered PDU when networking of PDUs is not an option.	✓	✓					
<b>Monitored</b> - Includes local and remote power monitoring for the PDU. Select a Monitored PDU when you want to monitor total power usage.	✓	✓	✓	✓	✓		
<b>Monitored Pro</b> - Includes local and remote power monitoring for each outlet on the PDU. Select a Monitored Pro PDU when you need to remotely measure individual power used by each piece of equipment.	✓	✓	✓	✓	✓	✓	
<b>Switched</b> - Includes local and remote power monitoring for the PDU and individual outlet control. Select a Switched PDU if you need to remotely turn power on or off at each outlet.	✓	✓	✓	✓	✓		✓
<b>Switched Pro</b> - Includes local and remote power monitoring for the PDU and each outlet on the PDU, as well as individual outlet control. Select a Switched Pro PDU to remotely measure and control power at each outlet.	✓	✓	✓	✓	✓	✓	✓

**Tip:** See how much savings you can obtain by taking advantage of the

## eConnect® Secure Array® Savings Estimator

Determine how much you can save by using the eConnect® Secure Array® Solution.



# INSTALLATION CHECKLIST

## Safety Warnings and Cautions

- DO NOT OPEN THE CHASSIS of an eConnect PDU. There are no user serviceable parts within an eConnect PDU, except for eConnect Field-Replaceable Controller Module. Opening or removing covers, receptacle plates, or other access points may expose you to dangerous shock hazards or other risks. Refer all servicing to qualified service personnel.
- Do not spill any liquids on the chassis.
- Do not insert objects of any kind into the eConnect chassis via vent holes or any openings as they may contact dangerous voltage points, which can be fatal or cause harmful electric shock, fire or equipment failure.
- Do not place any heavy objects on the power cord. Damage to the cord may cause shock or fire.
- PDU must be installed VERTICALLY in a RESTRICTED ACCESS LOCATION.
- RESTRICTED ACCESS LOCATION: location for equipment where both of the following apply:
  - Access can only be gained by SERVICE PERSONS or by USERS who have been instructed about the reasons for the restrictions applied to the location and about any precautions that shall be taken
  - Access is using a TOOL or lock and key, or other means of security, and is controlled by the authority responsible for the location.
- Hot surface warning label: The equipment may be hot under full load.
- If using the 10/100/1000MB Ethernet port at a 1000MB (Gigabit) speed, please use shielded Ethernet cables only.



## Checklist for Electronic Lock Kit:


- Connect wires between latch and CAN bus module
- Connect wires between sensors and CAN bus module
- Connect wires between CAN bus and PDU. Aux 1 should be connected to the rear door's CAN module. Aux 2 should be connected to the front door's CAN module.
- Login to the web GUI using the default login information of "admin/admin", and navigate to the "Cabinet Access – Settings" page.
- Select the checkbox for the appropriate lock you wish to enable, and click "Save"
- The lock is powered when you see a continuous blue light on the lock. At this point you should be able to refresh the web page and see the status update appropriately.
- Program the Card Reader and Smart Card ID (Go to [APPENDIX for Electronic Lock Kit for eConnect](#) for detailed information).
- Use the web GUI to change cabinet access and logging settings (Cabinet Access and Logging tabs respectively)
- The light will flash magenta/blue when the latch opens

# INSTALLATION GUIDE

## Preparation:

- Prepare a plan identifying where each rack device is to be connected to the PDU receptacle. For ease of power cord management, if you are installing a vertically mounted PDU, it is recommended to connect the rack device to the receptacle that is approximately at the same height.
- When using in North America, regulatory rating of input is de-rated to 80% of input plug. Please use a breaker with corresponding rating upstream of the PDU.
  - 20 A for PDU Input current rated 16 A
  - 30 A for PDU Input current rated 24 A
  - 40 A for PDU input current rated 32 A
  - 60 A for PDU input current rated 48 A
  - 80 A for PDU input current rated 64 A
  - 100 A for PDU input current rated 80 A
- It is recommended to retain the PDU Ethernet Hardware Address (MAC address) available through the LCD display under PDU Info. It's recommended to record the PDU name, rack/cabinet name, location and MAC address for future reference.
- If the rack device has more than 1 input for power for purpose of redundancy, the power cables should be connected to different PDUs.

## Locking Outlets:

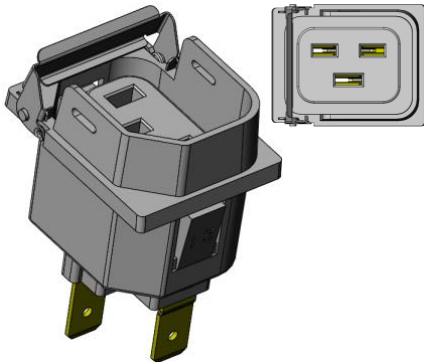


The locking receptacles feature a locking lever that engages with IEC corded plugs.

To engage, insert the IEC plug into the receptacle until you hear a click. Ensure the locking lever is engaged by squeezing the lever and IEC plug together.

To disengage, pull the locking lever away from the IEC plug until it holds in the open position. Then, disengage the IEC plug from the receptacle. If the locking lever does not hold open, use one of your fingers to hold it open as you disengage the IEC plug.

## External Connections:

1. Install the PDU into the cabinet and secure the PDU external ground wire to the cabinet ground stud.
2. Optional: Ethernet Port: Before connecting to LAN, [go to the Network Configuration](#) page for instructions. Use CAT5/6 cable. Note: If using the 10/100/1000MB Ethernet port at a 1000MB (Gigabit) speed, please use shielded Ethernet cables only.
3. Optional: Environmental Probe Port.
  - a. Use USB Temperature and Humidity Sensor (P/N 14665-001) and attach to any of the USB ports.
4. Optional: Out Port: For Secure Array when linking PDUs.
  - a. Use a standard CAT5/6 cable.
5. Optional: USB Port: For firmware upgrades use USB Flash Drive.

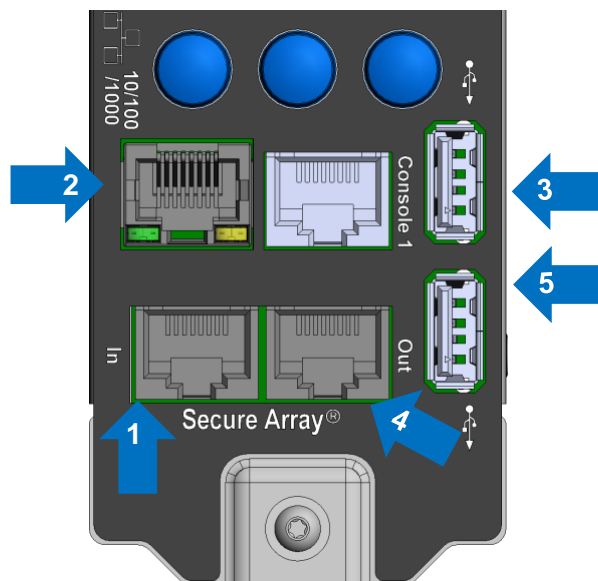

## Energizing the PDU

- Attach the input power cord to a matching power source.
- The PDU status light will blink Green for about 90 seconds as the PDU is booting up.
- A solid Green status light will follow with the LCD display coming on and displaying all zeroes.
- Once the PDU is energized, connect cabinet devices to their respective outlets.

## USING THE LOCAL DISPLAY

Vertical eConnect PDUs include a multifunctional LCD display has a 240 x 320 pixel resolution and can be navigated by three soft buttons located immediately above the display.

The local interface can display the following information:

- Sum of current, voltage and power values for single-phase PDUs
- Line input current and sum of voltage and power values on three-phase PDUs
- Current, voltage, power and power factor values per branch breaker
- Temperature and humidity values when optional environmental sensors are attached
- Per outlet current on Monitored Pro and Switched Pro models
- Alarm notification when predefined warning or critical thresholds are reached

The local interface can also be used to set up many functions of an eConnect PDU as following:


- Network IP setup (v4 and v6)
- Display settings – brightness, timeout, orientation
- PDU role (primary or secondary)
- PDU info



*Actual Information displayed may vary depending on whether the unit is single- or three-phase.*

## Basic Menu Navigation

The legend below explains the meaning of each button on the PDU display:

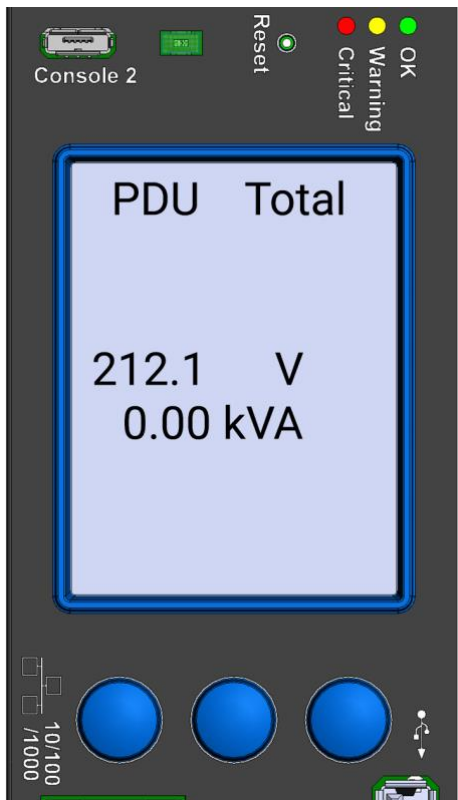

*Actual Information displayed may vary depending on whether the unit is single- or three-phase.*

### Menu button/icon definitions and functions

- ➊ Go to the Main Menu.


Note: In PDUs in the Secure Array, the blue icon —🏠—turns green—🏠

Note: The home icon turns purple during a firmware upgrade—🏠

- ➋ Select the highlighted menu item.
- ➌ Go to Setup menu.
- ➍ Move highlighted menu item down or to the right.
- ➎ Move highlighted menu item up or to the left.

## MONITORING PDU CONDITIONS

The main screen on single-phase PDUs list total amperage, voltage and power usage by equipment attached to the PDU. The main screen on three phase PDUs lists total voltage and power usage by equipment attached to the PDU.

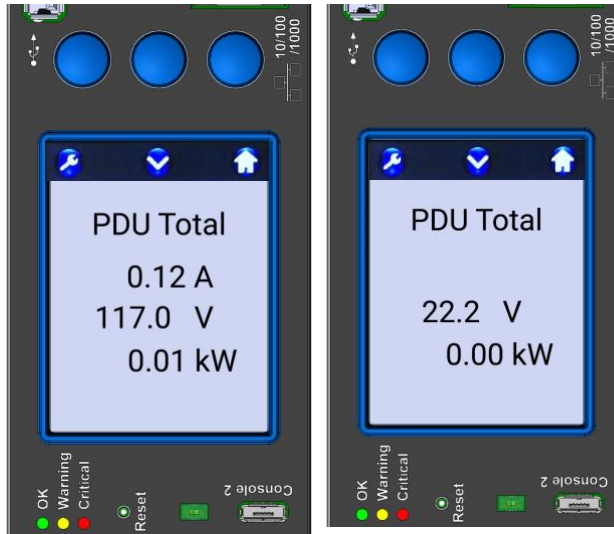


Single-phase PDU

Three-phase PDU

### From the Main menu press:

- **Left button** to set up the PDU
- **Middle button** to view the next screen
- **Right button** to go back to the Main Menu


The following screen(s) list branch circuit values (CB1, CB2 or XY, YZ, ZX). There is one screen per phase/branch.

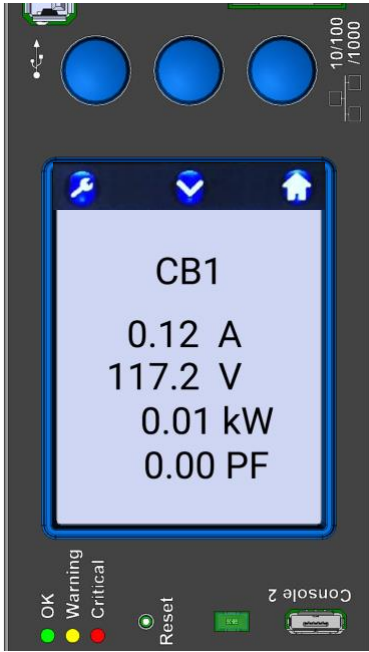

**From the Main menu press:**

- ⓘ **Left button** to set up the PDU
- ✓ **Middle button** to scroll through the remaining screens
- 🏠 **Right button** to go back to the Main Menu

After scrolling through the branch/phase screens, the PDU will display the Environment summary screen. USB Temperature and Humidity Sensor (P/N 14665-001) must be attached to the PDU for environmental values to display.

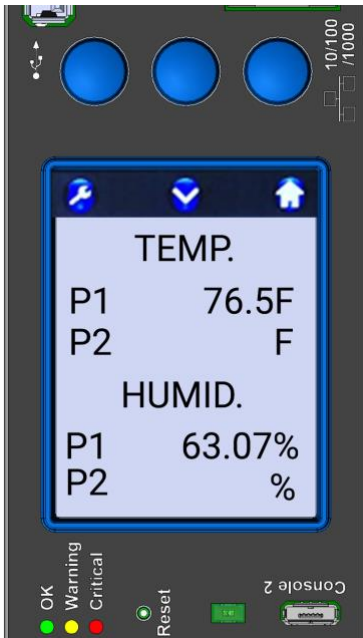


**From the Main menu press:**

- ✓ **Middle button** to view next data screen. This will return to the PDU Total screen
- ⓘ **Left button** to set up the PDU
- 🏠 **Right button** to go back to the Main Menu



On Monitored Pro and Switched Pro PDUs, the following screen(s) list total current use for each outlet. Eight outlets are listed on each screen.

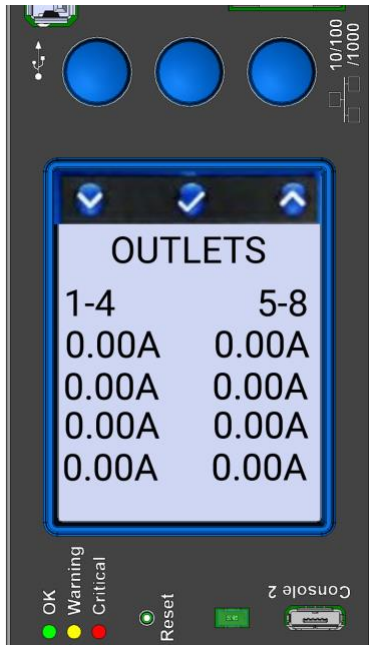

**From the Main menu press:**

- ☑ **Left button** to set up the PDU
- ☑ **Middle button** to go to the next data screen
- ☑ **Right button** to go back to the Main Menu

## Alarms

When any alarm or warning threshold is hit, the Alarms summary will be displayed before the PDU Total values when the **Home Icon** is selected.




**Color codes:**

Text with **Yellow** background: Warning condition was reached.

Text with **Red** background: Critical condition was reached.

**From the Main menu press:**

- ☑ **Left button** to access the setup menu
- ☑ **Middle button** to view additional summary screens
- ☑ **Right button** to go back to the Main Menu

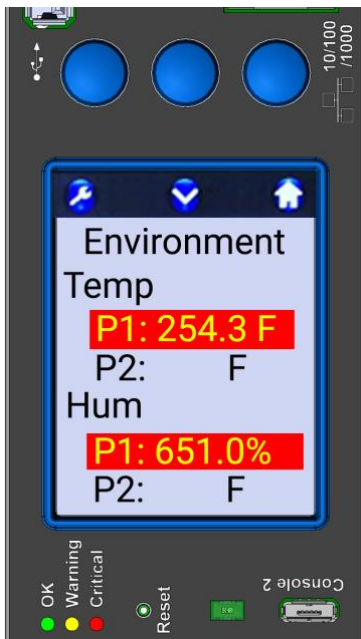

Additionally, when there is an alarm, the out-of-range measurements are highlighted on the respective summary screen, and the LED next to the display will flash.

## NETWORK CONFIGURATION

### Using DHCP

The default setting for the PDU is enabled for DHCP. The default address is **192.168.123.123**. Contact your network administrator to obtain the IP address assigned to the PDU by the DHCP server. To obtain the IP address for the PDU assigned by DHCP server, the PDU must be rebooted (go to [PDU Settings](#) to reset device).

To change network configuration using the LCD display, follow the instructions below. If the PDU does not have an LCD display, change network configuration using [Command Line Interface \(CLI\)](#).

- ✓ **Left button** to traverse down the list of options
- ✓ **Middle button** to select the highlighted option
- ✓ **Right button** to traverse up the list of options

Select **Exit** to exit this screen  
**Click on middle button** to set up IPv4 Network

- ✓ **Left button** to traverse down the list of options
- ✓ **Middle button** to select the highlighted option
- ✓ **Right button** to traverse up the list of options

Select **Save** or **Cancel** to exit this screen  
**Save** updates IP information immediately  
**Cancel** makes no changes to the setup

Return to the Setup Menu



*The image above is an example of the address given to the PDU by the DCHP server.*

To use Zero Touch Provisioning (ZTP) with DHCP, go [here](#).

## Using Static IP Address

Make sure to switch the DHCP option to "NO", then follow the instructions below.

Select the **Left Button** to access the PDU Setup Menu


- ☑ **Left button** to traverse down the list of options
- ☑ **Middle button** to select the highlighted option
- ☑ **Right button** to traverse up the list of options

Select **Exit** to exit this screen  
**Click on middle button** to set up IPv4 Network

- ☑ **Left button** to traverse down the list of options
- ☑ **Middle button** to select the highlighted option
- ☑ **Right button** to traverse up the list of options

Select **Save** or **Cancel** to exit this screen  
**Save** updates IP information immediately  
**Cancel** makes no changes to the setup

Return to the Setup Menu

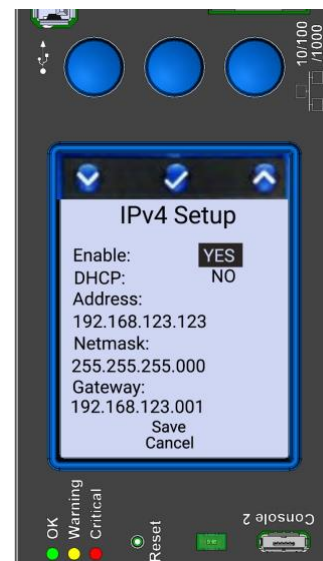


☑ **Use the Left Button** to select IPv6 Network.

☑ **Click on middle button** to set up IPv6 Network Use the Left Button to select IPv6 Network

- Select **Save** or **Cancel** to exit this screen
- **Save** updates IP information immediately
- **Cancel** makes no changes to the setup

- Make sure the settings are “YES” for Enable and “NO” for DHCP, then enter the PDU Address and Netmask
- Select **Save** or **Cancel** to exit this screen
- **Save** updates IP information immediately
- **Cancel** makes no changes to the setup

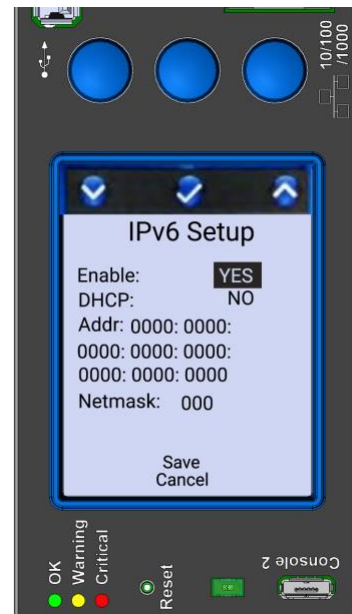

## DISPLAY SETUP



Return to the Setup Menu.

Use the Left button to select Display.

**Click on middle button** to set up the Display

**Click on:**

- ☑ **Left button** to traverse down the list of options
- ☑ **Middle button** to select the highlighted option
- ☑ **Right button** to traverse up the list of options



**Timeout** – Controls how long display remains on (minutes)

**Brightness** – Controls display brightness (1-9)

**Input Cord** – Controls display orientation (TOP or BOT input cord location). This rotates the display 180° so that it can be easily read regardless of whether the PDU is mounted with the cord toward the top or bottom of the cabinet. The display will automatically orient on power up.

**Outlet** – Controls whether individual outlet current measurements are displayed (Show or Hide) on Monitored Pro and Switched Pro models

Select **Save** or **Cancel** to exit this screen

**Save** updates IP information immediately

**Cancel** makes no changes to the setup

## PDU SETTINGS

Return to the Setup Menu.  
Use the **left** button to select PDU Settings.

**Click on middle button** to set up advanced info for the PDU

### Optional - Click on:

- 👇 **Left button** to traverse down the list of options
- 👉 **Middle button** to select the highlighted option
- 👈 **Right button** to traverse up the list of options



**Role** – There are three roles for the PDU: Secondary, Primary and Alternate. Secondary is the default role. Choose **PRIMARY** if PDU is the **FIRST PDU** in a Secure Array. Only one PDU may be Primary, and this must be the PDU with the highest level of functionality and highest number of outlets within that functionality. Choose **ALTERNATE** if the PDU will be a backup to the Primary. Only one PDU may be ALTERNATE, and this PDU must match the functionality and outlet quantity of the Primary in order to fully support the array. Otherwise keep or choose **SECONDARY**. See [Network Settings](#) for additional details.


**Temp** – Choose Celsius or Fahrenheit

**Restore Defaults** – Choose to select which fields will be restored (confirmation needed, see details on the next page)

**Update FW** – Choose to update firmware locally through USB port

**Save** – Confirm all changes made in this session

**Cancel** – Cancel all changes made in this session

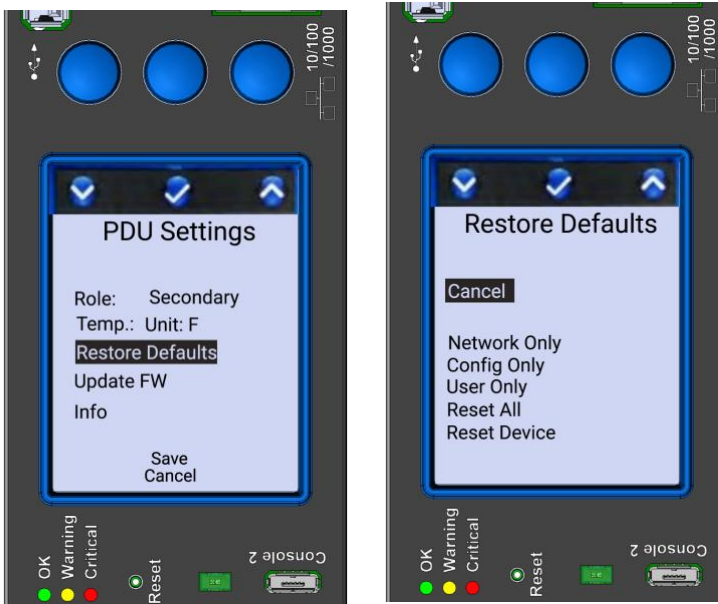

**Network Only** – Will immediately reset the IP address back to the default address (192.168.123.123) with DHCP enabled, and reboot the controller module. Outlets will not lose power, but you will lose your network connection and monitoring during reboot.

**Config Only** – Will immediately reset PDU and outlet names, alarm thresholds, etc. back to defaults, and reboot the main controller module. Outlets will not lose power, but you will lose your network connection and monitoring during reboot.

**User Only** – Will immediately delete all accounts except the default administrative user account: User Name: “admin”, Password: “admin”, and reboot the controller module. Outlets will not lose power, but you will lose your network connection and monitoring during reboot.

**Reset All** – Resets Network, Config and User values to defaults, the controller module. Outlets will not lose power, but you will lose your network connection and monitoring during reboot.

**Reset Device** – Only reboots the main controller module. No values are reset to default. Outlets will not lose power, but you will lose your network connection and monitoring during reboot.

**Note: The physical reset pin under the screen will Reset Device and erase all local memory, including the date of the log file.**



## UPDATE FIRMWARE

Click on middle button to update firmware for the PDU.

**Optional** - Click on:

- ✓ **Left button** to traverse down the list of options
- ✓ **Middle button** to select the highlighted option
- ✓ **Right button** to traverse up the list of options



Sample of Updating screen



Sample of Failed updating

## PDU MODEL INFORMATION

Optional - Click on:

- ☑ **Left button** to traverse down the list of options
- ☑ **Middle button** to select the highlighted option
- ☑ **Right button** to traverse up the list of options



Click on middle button to traverse back to the PDU Settings Menu.




Click on middle button to traverse back to the PDU Settings Menu.

**Note:** The P/N shown is the Regulatory Model number found on the UL label in the back of the unit.

## Outlet Status LED's:

Switched Pro, Switched and Monitored Pro vertical eConnect configurations include an LED on every individual outlet that provides outlet status information as shown in the table below:

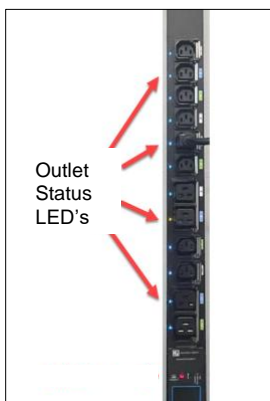

### Switched Pro, & Switched:

Color	State	Indication	Comments
Blue	Solid	Outlet ON due to relay being ON	Outlet ON
Amber	Solid	Outlet OFF due to relay being OFF	Outlet OFF
Blue	Blinking	Branch voltage below threshold	Outlet still ON
Blue	Blinking	Circuit breaker tripped	Outlet switched OFF

### Monitored Pro:

Color	State	Indication	Comments
Blue	Solid	Normal	Outlet ON
Blue	Blinking	Branch voltage below threshold	Outlet still ON
Amber	Blinking	Circuit Breaker tripped	Outlet switched OFF

## USING THE BUILT-IN WEB SERVER (GUI) APPLICATION

### Login

To access the PDU using the web GUI, connect the Ethernet port to a network switch.

The default setting for the PDU is enabled for DHCP. Contact your network administrator to obtain the IP address assigned to the PDU by the DHCP server. To obtain the IP address for the PDU assigned by DHCP server, the PDU must be rebooted (go to [PDU Settings](#) to reset device).


If the PDU does not have an LCD display, change network configuration using [Command Line Interface \(CLI\)](#).

To access the Web GUI, enter the PDU's IP address in your web browser, or contact your network administrator to obtain the IP address.

Default static IP address: **192.168.123.123**

Default Username/Password: **admin/admin**

The Login Screen will display:

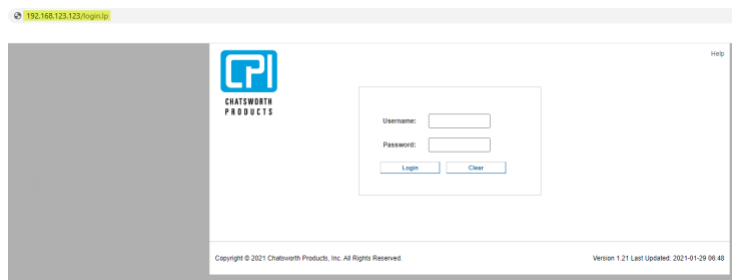

Log in using default Username and password: **admin, admin** and **click on Login** button or username and password if it has been created.

When logging into the Admin account, for the first time, when the PDU is placed into service or after doing a “Reset” of the User settings, you will be prompted to enter a new password.

Web GUI:

### Admin Password Reset

At the time of initial installation or after doing a 'Reset' of the User Database, the default Admin password must be changed prior to any Administrative activities. This is pursuant to [California/Oregon IoT laws](#) as described in [California SB 327](#) and [Oregon House Bill 2395](#) amending ORS 646.607

\* Passwords are limit to 64 characters. Additional characters will be ignored.

#### User Profile

User Name:

New Password:

Confirm New Password:

CLI:

```
[PDU Cabinet]:[PDU Name]
-----
Name: admin
Password:
Password Reset Required.
Enter New Password: █
```

Things to Note:

In the event of a Reset of the Users forcing a change to the Admin password, there are some behaviors to be aware of:


1. If LDAP is Enabled when the Users are reset, LDAP will be disabled.
  - a. As LDAP requires the user have a local account, the User reset removes those local accounts which will affect logging in with LDAP Authentication.
2. The change in password only affects the local login account. Any accounts authenticated by Radius will remain in effect.
  - a. Logging in to the system will fail if the updated password does not match the authentication established when Radius is enabled.
  - b. If Radius is ever disabled, the updated Admin password will be needed to log in to the local account.

## First Login – Set Date and Time

The PDU has data logging and alarm notification functions that benefit from a time and date stamp. However, the PDU does not have an internal clock. So, each time you power the PDU, you must manually set the time and date or assign a Time Server to do so automatically.

To assign a Time Server, click on the **Settings** tab, **Network** sub menu. Scroll down the page to the heading **Time Servers**.

Enter the IP Address of the RFC or NTP Time Server.

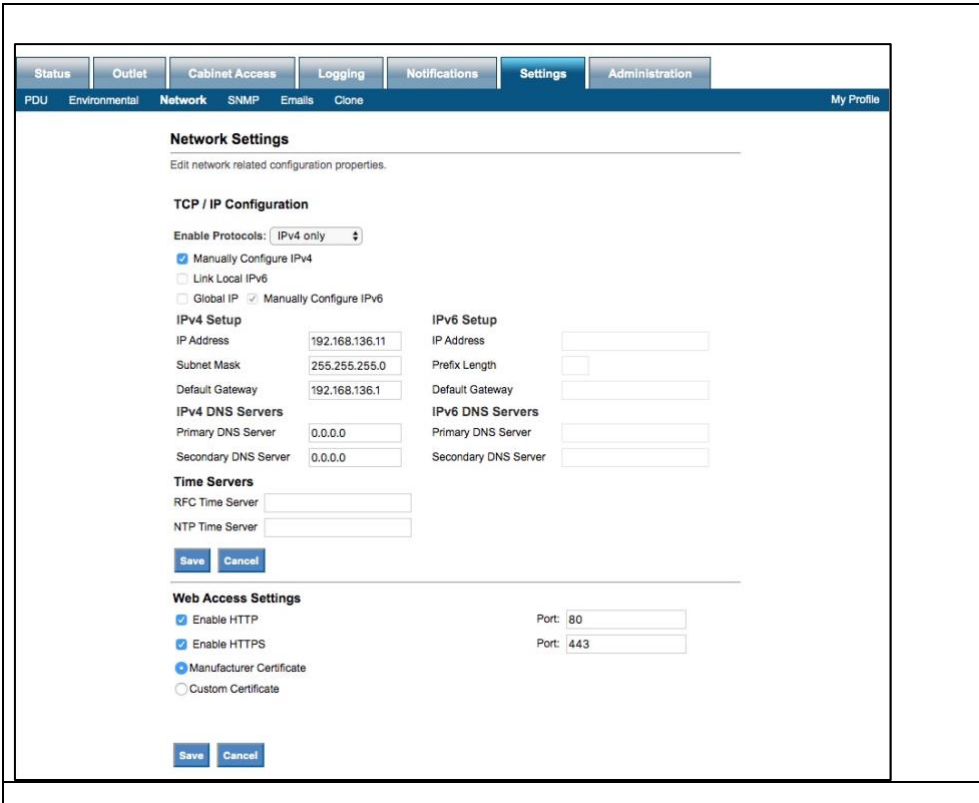


The screenshot shows the 'Network Settings' page in a web interface. The top navigation bar includes 'Status', 'Outlet', 'Cabinet Access', 'Logging', 'Notifications', 'Settings', and 'Administration'. Below this, there are sub-menus: 'PDU', 'Environmental', 'Network', 'SNMP', 'Emails', 'Clone', and 'My Profile'. The main content area is titled 'Network Settings' and contains the following sections:

- TCP / IP Configuration**: Includes 'Enable Protocols' (set to 'IPv4 only'), 'Manually Configure IPv4' (checked), 'Link Local IPv6' (unchecked), 'Global IP' (unchecked), and 'Manually Configure IPv6' (checked).
- IPv4 Setup**: Fields for IP Address (192.168.136.11), Subnet Mask (255.255.255.0), and Default Gateway (192.168.136.1).
- IPv6 Setup**: Fields for IP Address, Prefix Length, and Default Gateway.
- IPv4 DNS Servers**: Fields for Primary DNS Server (0.0.0.0) and Secondary DNS Server (0.0.0.0).
- IPv6 DNS Servers**: Fields for Primary DNS Server and Secondary DNS Server.
- Time Servers**: Fields for RFC Time Server and NTP Time Server.
- Web Access Settings**: Includes 'Enable HTTP' (checked), 'Enable HTTPS' (checked), 'Manufacturer Certificate' (selected), and 'Custom Certificate' (unchecked). It also has 'Port: 80' and 'Port: 443' fields.

At the bottom of each section, there are 'Save' and 'Cancel' buttons.

The PDU must have network access to the time server. For detailed network setup, see the [Settings – Network](#) page.

If you do not utilize a time server, or decide to set the time and date manually, click on the **Administration** tab, **Advanced** sub menu.

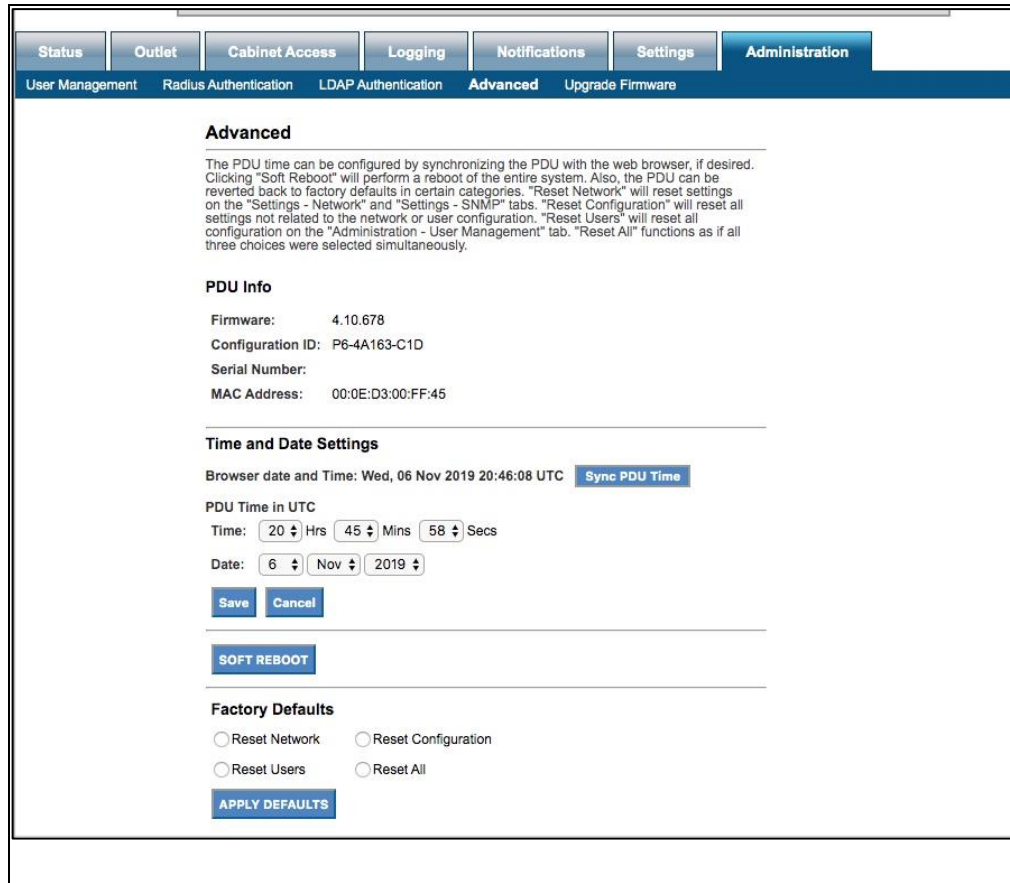

**Click on Sync PDU time** and then **Save** button to update the clock on the PDU using the browser date and time, or manually set the time with the drop boxes.

**Note that if you perform a firmware upgrade, the PDU will reboot and the time will need to be manually reset, unless you have assigned Time Server to the PDU.**

The remainder of the manual is ordered according to the tabs on the screen displayed above, so the next section is Status and the Status sub menus.

Note that the screenshot above is from a Switched Pro PDU, which includes Outlet Control and Monitoring features. Note that there are tabs for Status, Outlet, Settings and Administration. However, there is no Outlet tab on Monitored models.

## Status – Overview

Click on the **Status** tab, **Overview** sub menu to view circuit, sensor, input and outlet status.

All models present branch circuit status and sensor status (when attached).

The screenshot below shows a single-breaker model with PDU Branch Status for branch circuits (CB1). If you have models with more breakers, you'll see CB1, CB2, going up to CB6. Note that there are also single breaker/circuit, three-breaker/circuit and six-breaker/circuit models. Your model may display fewer circuits.

### PDU Branch Status

Branch	Voltage	Current	PF	Power* (kVA / kW)	Energy* (kVAh / kWh)	Current Usage & Thresholds
CB1	208.0V	12.00A	0.94	2.50 / 2.35	1184.43 / 1113.37	
CB2	208.0V	12.00A	0.94	2.50 / 2.35	1180.96 / 1110.10	
CB3	208.0V	12.00A	0.94	2.50 / 2.35	1183.90 / 1112.86	
CB4	208.0V	12.00A	0.94	2.50 / 2.35	1180.83 / 1109.98	
CB5	208.0V	12.00A	0.94	2.50 / 2.35	1183.70 / 1112.68	
CB6	240.0V	15.00A	0.95	3.60 / 3.42	1180.16 / 1121.16	
TOTAL				16.08 / 15.15	7093.98 / 6680.14	

\* On units with firmware version 4.x.xxx, only kVA / kVAh values will be presented.

Once alarm thresholds are set (see [Notification Thresholds](#)), the PDU Branch Status table under the Status tab, Overview sub menu will show the operating range as a green bar, warning range as a yellow bar, and alarm range as a red bar. The actual measured value will be shown as a black line overlaying the graph.

This allows a quick visual reference for available power within the acceptable operating range for each circuit. The total power consumed is also displayed at the bottom of the graph as a percentage of power available.

Scroll down.

If an optional Temperature and Humidity Sensor is attached to the PDU, temperature and humidity will be displayed under Sensor Status. You can connect two sensors to each PDU.

Three-phase PDUs will also display PDU Input Status – the amount of current (Amperes) on each line input before the breakers. This value is not logged.

If deploying PDU with Auxiliary Ports and Electronic Lock Kit, scroll down the page to view door and lock status.

### Sensor Status

	Temp	Humidity
Probe 1 Name		
Probe 2 Name		

### PDU Input Status

	Current
Line1	0.00A

When the Electronic Lock Kit is attached to the PDU, the doors and the locks will be displayed under Front Door Status and Rear Door Status.

### Front Door Status

State
Door: Not Configured
Lock: Not Configured

### Rear Door Status

State
Door: Not Configured
Lock: Not Configured

Door status:

- Not

**Configured:** Lock is not enabled.

- **Closed:** Door is closed.
- **Opened:** Door is opened.
- **Tampered Open:** Door is opened, and lock is locked or tampered unlocked or force unlocked.

Lock status:

- **Not Configured:** Lock is not enabled.
- **Locked:** Lock is locked and handle is in the cradle
- **Force Unlocked:** Unlock using the GUI
- **Tamper Unlocked:** Unlock using the key and handle is not in the cradle.
- **Unlocked via Key Card:** A registered smart card was used to unlock.

Scroll down.

Monitored Pro, Switched, and Switched Pro models will also present per outlet status. The image below shows a Switched Pro model. Switched models do not include Current, Voltage, Power or Energy values. Monitored Pro models do not include Status or Control values. There are LEDs next to the outlets to identify the On/Off status of the outlets.


### Outlet Status

Outlet Name	Status	Control	Branch	Current	Voltage	Power Factor	Power (kVA)	Energy (kVAh)
1 - Outlet 1	On	<input type="checkbox"/>	CB1	0.00A	121.8V	0.00	0.00	0.00
2 - Outlet 2	On	<input type="checkbox"/>	CB1	0.00A	121.8V	0.00	0.00	0.00
3 - Outlet 3	On	<input type="checkbox"/>	CB1	0.00A	121.8V	0.00	0.00	0.00
4 - Outlet 4	On	<input type="checkbox"/>	CB1	0.00A	121.8V	0.00	0.00	0.00
5 - Outlet 5	On	<input type="checkbox"/>	CB1	0.00A	121.8V	0.00	0.00	0.00
6 - Outlet 6	On	<input type="checkbox"/>	CB1	0.00A	121.8V	0.00	0.00	0.00
7 - Outlet 7	On	<input type="checkbox"/>	CB1	0.00A	121.8V	0.00	0.00	0.00
8 - Outlet 8	On	<input type="checkbox"/>	CB1	0.00A	121.8V	0.00	0.00	0.00

On Off Reset



The PDU sStatus LED will be **RED**.  
 All LEDs will be back to normal as the alarm situation has been handled.

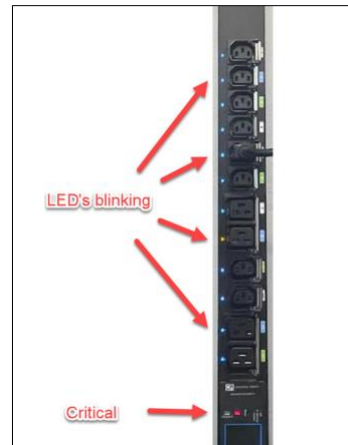

### Status – Alarms

Click on **Alarms** to view a summary of Alarm messages, if there are any present:

Warning thresholds are indicated by a **yellow-colored** rectangular alarm status symbol.  
 Critical thresholds are indicated by a **red-colored** rectangular alarm status symbol.

**Alarms Status**  
 Summary of all active alarms within the PDU. If the PDU is an active Primary in a SecureArray™, all active alarms within the SecureArray™ are shown as well.

#	Status	PDU Name	Alarm
1	Yellow	IPDU2	Voltage dropped below Warning Low Threshold in Branch CB1

**Alarms Status**  
 Summary of all active alarms within the PDU. If the PDU is an active Primary in a SecureArray™, all active alarms within the SecureArray™ are shown as well.

#	Status	PDU Name	Alarm
1	Red	IPDU2	Voltage dropped below Critical Low Threshold in Branch CB1

Note: The CPI alerts and notification system can be broken down into a few components:

- Configured thresholds
- Active alarms based on the current metrics in relation to the configured thresholds
- Notifications of these alarms in the form of SNMP traps, log entries, and emails when configured.

## Outlet – Overview

Monitored Pro, Switched and Switched Pro models, Click on Outlet, Overview tab to view Outlet Status on the PDU:

Outlet Name	Status	Control	Branch	Current	Voltage	Power Factor	Power (kVA)	Energy (kVAR)
1 - Outlet 1	On	<input type="checkbox"/>	CB1	0.00A	122.1V	0.00	0.00	0.00
2 - Outlet 2	On	<input type="checkbox"/>	CB1	0.00A	122.1V	0.00	0.00	0.00
3 - Outlet 3	On	<input type="checkbox"/>	CB1	0.00A	122.1V	0.00	0.00	0.00
4 - Outlet 4	On	<input type="checkbox"/>	CB1	0.00A	122.1V	0.00	0.00	0.00
5 - Outlet 5	On	<input type="checkbox"/>	CB1	0.00A	122.1V	0.00	0.00	0.00
6 - Outlet 6	On	<input type="checkbox"/>	CB1	0.00A	122.1V	0.00	0.00	0.00
7 - Outlet 7	On	<input type="checkbox"/>	CB1	0.00A	122.1V	0.00	0.00	0.00
8 - Outlet 8	On	<input type="checkbox"/>	CB1	0.00A	122.1V	0.00	0.00	0.00

Switched and Switched Pro models, you can turn outlets on or off by clicking the checkbox under the Control column. The indicator in the Status column will change as the outlet switches on or off.

Scroll down to view the rest of the Outlets.

## Outlet – Setup

To name and enter alarm limits for a specific Outlet, from the **Outlet** tab, click on the **Set Up** sub menu, and use the drop-down list to select the outlet:

Outlet Setup

Select an Outlet to edit from the drop down menu.

Select an Outlet from list: Outlet 2 (2)

Outlet Name:\*

Outlet Description:

Outlet Name	Status	Branch	Current	Voltage	Power Factor	Power (kVA)	Energy (kVAR)
2 - Outlet 2	On	CB1	0.00A	121.8V	0.00	0.00	0.00

No Change  On  Off  Reset



Outlet ON Delay:  Seconds

Outlet Reset Delay:  Seconds

Switched and Switched Pro models include settings for Outlet ON Delay and Outlet Cycle Delay, allowing you to specify a delay when power is cycled. Enter Outlet data and click on **Save** button to save new data.

## OUTLETS – GROUPS

To create a group of outlets from a single PDU or multiple PDUs that are linked together, click on the **Outlet** tab, click on the **Groups** submenu, then click on **New Group**:

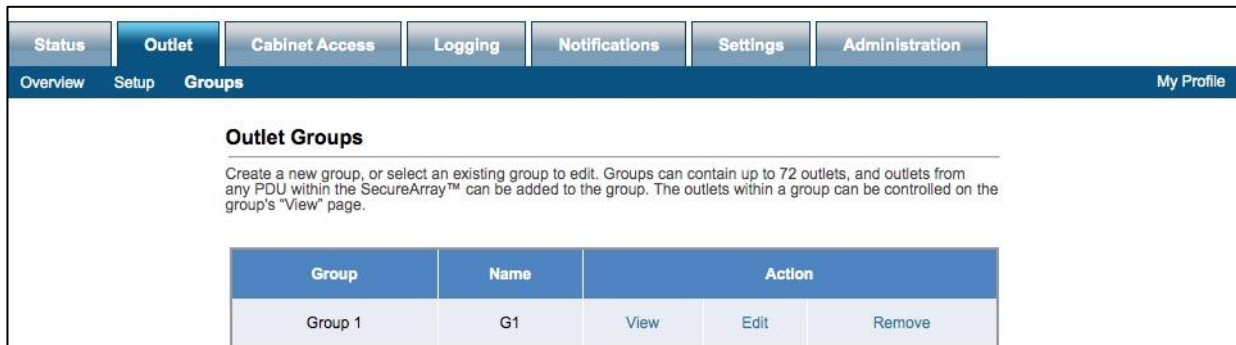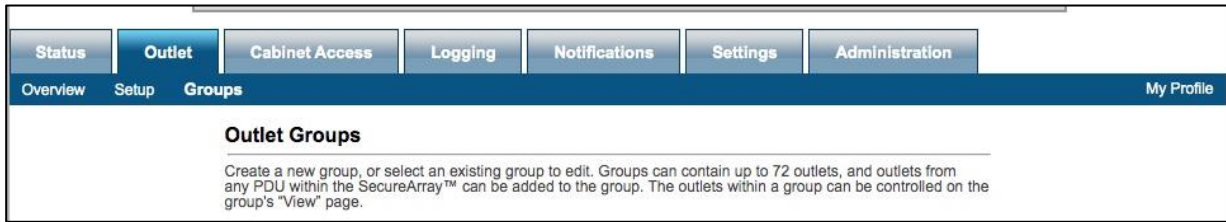


Name the Group, select PDU(s) and Outlets to be grouped and click on **Save** button:

To view, edit or remove an existing group, click on **View or Edit or Remove** under Action in the Outlet, Groups table:

View provides Group Status. You can see totals and control outlets on Switched and Switched Pro.

## CABINET ACCESS – OVERVIEW

\*Only applicable for eConnect PDUs with Auxiliary Ports to power and control RFID Electronic Locks.



### Cabinet Access Overview

View the state of the two doors attached to the cabinet where this PDU resides if there is a connection to a CPI Electronic Access Control system. The doors can be either closed and unlocked, closed and locked or completely opened. The third table shows the five most recent door openings/closings to the cabinet.

#### Front Door Status

State
Door: Not Configured
Lock: Not Configured
<input type="button" value="UNLOCK"/>

#### Rear Door Status

State
Door: Not Configured
Lock: Not Configured
<input type="button" value="UNLOCK"/>


## CABINET ACCESS – SETTINGS

Enter the **Cabinet Lock Open Time**: 1 – 30 seconds. The default value is 5 seconds

Enter **Cabinet Door Open Alarm Time**: 1 – 240 mins. The default value is 10 minutes

Check box to enable Front or/and Rear Lock(s) where applicable

Click on **Save** to save the configured data.



### Cabinet Access Settings

Select the checkboxes for "Enable Front Lock" and/or "Enable Rear Lock", and then click the "Save" button to initiate configuration of the Electronic Access Control system. Once completed, the PDU will be able to interact with the cabinet's door locks, send notifications on error conditions, and give a real-time status of the system.

Cabinet Lock Open Time:  Seconds

Cabinet Door Open Alarm Time:  Minutes

Enable RF Ideas EAC Smart Card Reader Compatibility

Enable Front Lock

Enable Rear Lock

#### Front Door Status

State
Door: Not Configured
Lock: Not Configured

#### Rear Door Status

State
Door: Not Configured
Lock: Not Configured

# CABINET ACCESS – RADIUS CARD SETTINGS

Navigation tabs: Status, Outlet, **Cabinet Access**, Logging, Notifications, Settings, Administration  
Sub-navigation: Overview, Settings, **Radius Card Settings**, Power-IQ Card Settings

## Radius Card Access Control Authentication

Electronic Access Control card users authenticated via Radius will need card information and assignment to Group: Cabinet return by the Radius server or will need a local user defined with Cabinet Group access (See manual for details).

Enable Radius Card Authentication

Use IPv6

Radius Server 1  Port: 1812

Radius Server 2  Port: 1812

Radius Server 3  Port: 1812

Radius Secret  (Leave blank to keep current secret)

Connection Test  
Test Card ID:

After “Check the Use IPv6 box. If applicable click Save.”

Navigation tabs: Status, Outlet, **Cabinet Access**, Logging, Notifications, Settings, Administration  
Sub-navigation: Overview, Settings, Radius Card Settings, **Power-IQ Card Settings**

## Power-IQ Card Access Control Authentication

Edit Power-IQ SNMP trap related configuration properties.

Enable Power-IQ Traps

# LOGGING – OVERVIEW

**Logging Overview**

The PDU creates an events log (syslog) of system changes. Logs are stored locally until exported. The table below is a summary of the last 10 (syslog) events. Use the Logging-Settings tab to configure the remote storage server location and remote events log (syslog) server location. Use the Logging-Export Logs tab to search for and manually export logs.

**Syslog Quickview**

**Syslog Filter** [Reload Entries](#)

Event  Audit  System

**Syslog Entries**

Time (UTC)	Entry
Oct 31 15:44:43	[ELAB_DCHAIN];[IPDU2];[Audit] IPv4 DNS Address was changed.
Oct 31 15:44:43	[ELAB_DCHAIN];[IPDU2];[Audit] IPv4 DNS Address was changed.
Oct 31 15:39:45	[ELAB_DCHAIN];[IPDU2];[Audit] User admin logged in on the web GUI interface.
Oct 31 15:17:16	[ELAB_DCHAIN];[IPDU2];[Audit] User admin logged in on the web GUI interface.
Oct 30 20:24:27	[ELAB_DCHAIN];[IPDU2];[Audit] User admin logged in on the web GUI interface.
Oct 30 20:19:35	[ELAB_DCHAIN];[IPDU2];[Audit] SYSLOG Central Server Address was changed.
Oct 30 20:17:59	[ELAB_DCHAIN];[IPDU2];[Audit] User admin logged in on the web GUI interface.
Nov 6 20:57:51	[ELAB_DCHAIN];[IPDU2];[Audit] User admin logged in on the web GUI interface.
Nov 6 20:44:10	[ELAB_DCHAIN];[IPDU2];[Audit] User admin logged in on the web GUI interface.
Nov 6 20:42:25	[ELAB_DCHAIN];[IPDU2];[Audit] User asmin FAILED to log in on the web GUI interface.

Select Syslog Filter by checking the check box(es) and click on the **Reload Entries** button to obtain up-to-date information.

## LOGGING – EXPORT LOGS

The screenshot shows a web application interface for logging and exporting logs. The top navigation bar includes tabs for Status, Outlet, Cabinet Access, Logging (selected), Notifications, Settings, and Administration. Below this is a sub-navigation bar with 'Overview', 'Export Logs' (selected), and 'Settings', and a 'My Profile' link on the right. The main content area is titled 'Export Logs' and contains a paragraph of instructions: 'Select the time interval you wish to view data from. You can choose to "Download" your data in a CSV format or "Transfer" the CSV file to the server specified on the Settings page, if configured.' Below the text is a 'Log file:' label followed by a dropdown menu showing 'Oct 16 07:28:25 - Current'. At the bottom are two buttons: 'DOWNLOAD' and 'TRANSFER TO SERVER'.

**Select type of file and select the log file to be exported.**

Click on **DOWNLOAD** to download selected file to the connecting computer.

Click on **TRANSFER TO SERVER** to save the file on the designated storage server.

Click on **DELETE** to remove the save file from the PDU

## LOGGING – SETTINGS

**Log Settings**

The Log Server can be enabled for manual or auto-transfer of the syslog files to another server available over the network. Auto-transfers will take place every 6 hours once enabled. Manual transfers are initiated via the "Export Logs" page. The "Save and Test Connection" button can be used to test your specified storage server settings. Be aware, if the specified destination directory does not exist, it will be created during the connection test. The Syslog server option can be enabled for real-time streaming of syslog data to a pre-configured syslog server available on the network.

**Event Logging Settings**

Log Identity:

Log Facility:

**Storage Server**

SSH Server Address:  Port:

Destination Directory:

Connection options:

User Name:

Password:

Auto-Transfer Event Log:

**Syslog Server**

Server Address:  Port:

### Metric Data Logging:

Check Enable Logging check box to begin capturing data on the PDU internal memory. Input the desired interval and Log Full Warning Level percentage.

### Event Logging Settings:

Log Identity and Log Facilities are preset on the PDU memory system. Pick any Log Local to store data locally.

### Storage Server:

Input information for Data Log and Event Log to be stored remotely. Make sure to click on the **Save and Test Connection** button to validate the connection and authorization to save data on the remote server.

### Syslog Server:

Allows the use of the remote server as the Syslog instead of the PDU itself.

Click on **Save** to save all input data.



# NOTIFICATIONS - THRESHOLDS

## Branch Thresholds

Input all desired limitations to be set as thresholds.  
Click on **Save**.

Scroll down to input other thresholds.

## Environmental Thresholds

Input all desired limitations to be set as thresholds.  
Click on **Save**.

Scroll down to input other thresholds.

## Environmental Thresholds (Continued)

For Switched and Switched Pro models only:

**Environmental Thresholds**  
Are limited to 150 °F (65.5 °C).

**Notification Thresholds**

Specify the data thresholds and warning thresholds for the rows in the table.

192.168.123.126 says  
Temperature 1: Critical High cannot be higher than 150

OK

**Branch Thresholds**

Clear All Copy to All From Branch: 1

Branch	Critical Low Voltage (Volts)	Warning Low Voltage (Volts)	Warning High Voltage (Volts)	Critical High Voltage (Volts)	Critical Low Load (Amps)	Warning Low Load (Amps)	Warning Overload (Amps)	Critical Overload (Amps)
CB1	0	0	0	0	0	0	0	16

Save Cancel

**Environmental Thresholds**

Clear All

Sensor	Critical Low	Warning Low	Warning High	Critical High
Temperature 1	<input type="text"/> °F	<input type="text"/> °F	<input type="text"/> °F	<input type="text" value="155"/> °F
Temperature 2	<input type="text"/> °F	<input type="text"/> °F	<input type="text"/> °F	<input type="text"/> °F
Humidity 1	<input type="text"/> %	<input type="text"/> %	<input type="text"/> %	<input type="text"/> %
Humidity 2	<input type="text"/> %	<input type="text"/> %	<input type="text"/> %	<input type="text"/> %

Save Cancel

**NOTIFICATIONS - ROUTING**

Status Outlet Cabinet Access Logging **Notifications** Settings Administration

Thresholds Routing My Profile

**Notification Routing**

Specify how you would like to be notified of an alarm event for this PDU. You can choose to have an entry in the syslog file, a trap sent via SNMP (if the appropriate SNMP settings are configured on the Settings - SNMP page), and have an email notification sent (if the email setup has been completed on the Notifications - Emails page).

**Branch Voltage Notifications**

Event	Log	Trap	Email
Branch Critical Low Voltage	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Branch Warning Low Voltage	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Branch Warning High Voltage	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Branch Critical High Voltage	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**Branch Current Notifications**

Event	Log	Trap	Email
Branch Critical Low Load	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Branch Warning Low Load	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Branch Warning Overload	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Branch Critical Overload	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Select method(s) of notifications for Branch Voltage and Branch Current by checking the check box(es): Log, Trap, Email

Check the Log boxes to check what kinds of events provoke a log entry. Then, check the boxes for the events you want to Trap.

With regards to emails, if a particular alarm becomes active, the PDU will send an email in response to this alarm becoming active, if configured to do so.

This configuration includes the email settings to get emails to work at all, plus the configuration on the **Notifications – Routing** page, which determines which the alarms will provoke an email being sent.

These email messages will include which alarms have become active/cleared at the moment the email was sent. They do not, however, contain a message for every currently active alarm, only the alarms that have just “tripped” or “cleared”.

Scroll down for more notification settings.

Outlet Current Notifications			
Event	Log	Trap	Email
Outlet Critical Low Current	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Outlet Warning Low Current	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Outlet Warning High Current	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Outlet Critical High Current	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Temperature Notifications			
Event	Log	Trap	Email
Temperature Critical Low	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Temperature Warning Low	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Temperature Warning High	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Temperature Critical High	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Humidity Notifications			
Event	Log	Trap	Email
Humidity Critical Low	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Humidity Warning Low	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Humidity Warning High	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Humidity Critical High	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Select method(s) of notifications for Outlet, Temperature, Humidity if applicable by checking the check box(es): Log, Trap, Email.

Scroll down for more notification settings.

Select method(s) of notifications for Door, Lock, and PDU if applicable by checking the check box(es): Log, Trap, Email.

Click on **Save** to save the input data.

## SETTINGS – PDU

**PDU Settings**

Edit SecureArray™ and general PDU related configuration properties.

Cabinet ID:

PDU Name\*:

PDU Description:

Primary PDU:

Aux Port Usage:  EAS  QPO

QPO Disconnect:  Turn Off Outlets  Maintain Outlet State

QPO Power:  Powers the QPO Device. Only 1 allowed per QPO bus.

Out Of Service:  No alarms will be sent

Sum Amps:  Amperage will be summed across all branches

Enter desired **PDU Name** and **Location**. The PDU Name is displayed in the summary information at the top of each web interface screen and on the PDU’s LCD screen.

**Out of Service checkbox:** Check this box to deactivate the Electronic Lock Kit alarms if a PDU goes offline or becomes “unlinked.” Use this checkbox for planned service.

**Door and Lock Notifications**

Event	Log	Trap	Email
Badge Scanned and Verified	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Badge Scanned and Not Verified	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Door Opens or Closes	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Lock Opens or Closes	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Door Open Longer than Alarm Period	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**PDU Notifications**

Event	Log	Trap	Email
PDU Firmware Update Applied	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PDU Configuration Change	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PDU Receptacle Change	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PDU System Reboot	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PDU Accessed	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
SecureArray™ State Change	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Select All  Select All  Select All

**System Info**  
 Name: S1  
 Description: My first ZTP configured PDU  
 Configuration ID: K60-0Y030-409-72A  
 IP Address: N/A  
 Firmware: 5.3.792

**Session Info**  
 User: admin  
 Last Login: 2014-10-10 14:07  
 Uptime: Not available  
 microSD Card: Present

**Alarms**

**PDU Settings**  
 Edit SecureArray® and general PDU related configuration properties.

Cabinet ID: PDU Cabinet  
 PDU Name: S1  
 PDU Description: My first ZTP configured PDU

**Alternate Primary:**  If Primary PDU is not active then this PDU will assume the role  
 0 Number of systems in the SecureArray® (Currently 1)

**Send Notification on**  
 Link Count change:  If Linked system count changes then notification will be sent  
 Role Change:  If Role between Alternate and Primary is changed notification will be sent

**Aux Port Usage:**  EAS  QPO  
 QPO Disconnect:  Turn Off Outlets  Maintain Outlet State  
 QPO Power:  Powers the QPO Device. Only 1 allowed per QPO bus

**Out Of Service:**  No alarms will be sent  
**Sum Amps:**  Amperage will be summed across all branches

Save Cancel

Copyright © 2021 Chatsworth Products, Inc. All Rights Reserved. Version 1.21 Last Updated: 2021-01-29 06:48

**Primary PDU checkbox:** eConnect PDUs can be linked together through a Secure Array to share a single IP address through a single network connection. Check this box for the PDU with the highest-level functionality. For several PDUs that have the highest level of functionality, check the box for the one that has the highest number of outlets. The check box for Primary PDU should only be checked if this PDU is linked with other PDUs, and if this is the PDU that is attached to the network. If this PDU is not linked to other PDUs, do not check the Primary PDU check box.

Remote cabinet access control through Electronic Lock Kit is possible with all the PDUs that are linked together in the Secure Array.

**Share Role checkbox:** When linking PDUs, there can also be an Alternate (Primary) PDU to provide a backup network connection if the Primary PDU loses its network connection.

To keep cabinet access control entries, make sure the Smart Card ID information is on both the Primary and Alternate PDU in case the role of the Primary PDU changes.

**Link Count Change checkbox:** Check this box to receive an alarm notification if the number of PDUs in the Secure Array changes indicating a potential link failure.

**Role Change checkbox:** Check this box to receive an alarm notification if the Alternate PDU assumes the Primary PDU role indicating a potential primary PDU or network connection failure.

**Aux Port Usage:** Only check the QPO option if the PDU is linking to the “quick power off” switch. Fill in the desired choices and click on **Save**.

## SETTINGS – PDU - CLONE

The screenshot shows the 'Clone and Transfer Settings' page. At the top, there are navigation tabs: Status, Outlet, Cabinet Access, Logging, Notifications, Settings (selected), and Administration. Below these are sub-tabs: PDU, Environmental, Network, SNMP, Emails, Clone, and My Profile. The main content area is titled 'Clone and Transfer Settings' and includes the instruction: 'Select the settings you wish to clone from this Primary PDU to any number of PDUs on the daisy chain.'

On the left, there is a 'SecureArray™' sidebar with a 'Sort ASC' dropdown and a list of PDUs under 'IPDU2'. The 'Primary PDU' is highlighted at the bottom of this list.

The 'Settings to Clone:' section contains a 'Select All' checkbox and several other checkboxes, all of which are checked: Branch Voltage Thresholds, Branch Current Thresholds, Outlet Reset Delays, Outlet ON Delays, Outlet Current Thresholds, Temperature Thresholds, Humidity Thresholds, Temperature Unit, Trap Interval, Sum Amps Setting, Out-of-Service Setting, Notification Specifications, and Logging Settings.

Below this is a 'Select PDU's to Clone to:' list box containing a scrollable list of PDU IDs from SA1-3-37 to SA1-3-48. At the bottom of the list box are 'Clone' and 'Cancel' buttons.

Data from the Primary PDU can be cloned to the other PDUs in the Secure Array by checking the desired parameters and selecting the PDUs to be cloned.

You can designate one of the linked PDUs as an Alternate PDU. The Alternate PDU serves as a backup to the Primary PDU. It has a second and separate network connection from the Primary PDU and assumes the Primary role, providing a network connection to the PDUs in the array, if the Primary PDU loses connection. The Alternate PDU must be equivalent to the Primary in functionality and outlet quantity in order to fully support the array. Additionally, if deploying an Electronic Lock Kit, the Alternate PDU must have the same user access information (ID card) from the primary PDU for the access logging information to show up in the GUI.

Check the Alternate Primary check box, fill in the desired choices and click on **Save**.

The screenshot shows the configuration page for PDU SA1-3-33. The 'PDU Name' is 'SA1-3-33' and the 'PDU Description' is 'MCM 33 - Box 3 - Array 1'. The 'Alternate Primary' checkbox is checked, and a red arrow points to it. Below this, there are several sections with checkboxes and radio buttons:

- Share Role:**  If the SecureArray™ fails over to the Alternate System, the SecureArray™ will not switch back to the Primary System.
- Linked System Count:** 0 Number of systems in the SecureArray™ (Currently 16)
- Send Notification on Link Count change:**  If Linked system count changes then notification will be sent
- Role Change:**  If Role between Alternate and Primary is changed notification will be sent
- Aux Port Usage:**  EAS  QPO
- QPO Disconnect:**  Turn Off Outlets  Maintain Outlet State
- QPO Power:**  Powers the QPO Device. Only 1 allowed per QPO bus.
- Out Of Service:**  No alarms will be sent
- Sum Amps:**  Amperage will be summed across all branches

At the bottom of the page are 'Save' and 'Cancel' buttons.

## SETTINGS - ENVIRONMENTAL

The screenshot shows a web interface with a top navigation bar containing tabs for Status, Outlet, Cabinet Access, Logging, Notifications, Settings (which is active), and Administration. Below this is a sub-navigation bar with links for PDU, Environmental (which is active), Network, SNMP, Emails, and Clone. On the far right of the sub-navigation bar is a link for My Profile. The main content area is titled "Environmental Settings" and includes the text "Edit general environmental probe settings." Below this text are two radio buttons for "Unit of Measure" (°F and °C), two text input fields for "Probe 1 Name" and "Probe 2 Name", and "Save" and "Cancel" buttons. On the left side of the main content area, there is a sidebar for "SecureArray™" with a "Sort ASC" dropdown and a tree view showing "IPDU2" with sub-items "SA1-3-33", "SA1-3-34", and "SA1-3-35".

Select choice of temperature unit, enter name for the temperature and humidity sensors. Click on **Save**.

## SETTINGS – NETWORK

The screenshot displays the 'Network Settings' page in the SecureArray web interface. The top navigation bar includes tabs for Status, Outlet, Cabinet Access, Logging, Notifications, Settings, and Administration. Below this, a secondary navigation bar shows 'PDU', 'Environmental', 'Network' (selected), 'SNMP', 'Emails', 'Clone', and 'My Profile'. The main content area is titled 'Network Settings' and contains the following sections:

- TCP / IP Configuration:** Includes an 'Enable Protocols' dropdown set to 'IPv4 only'. It has checkboxes for 'Manually Configure IPv4' (checked), 'Link Local IPv6', 'Global IP', and 'Manually Configure IPv6' (checked).
- IPv4 Setup:** Fields for IP Address (192.168.136.11), Subnet Mask (255.255.255.0), and Default Gateway (192.168.136.1).
- IPv6 Setup:** Fields for IP Address, Prefix Length, and Default Gateway.
- IPv4 DNS Servers:** Fields for Primary DNS Server (0.0.0.0) and Secondary DNS Server (0.0.0.0).
- IPv6 DNS Servers:** Fields for Primary DNS Server and Secondary DNS Server.
- Time Servers:** Fields for RFC Time Server and NTP Time Server.
- Web Access Settings:** Checkboxes for 'Enable HTTP' and 'Enable HTTPS'. Radio buttons for 'Manufacturer Certificate' (selected) and 'Custom Certificate'. Fields for 'Port: 80' and 'Port: 443'.

On the left side, there is a sidebar with a 'Sort ASC' dropdown and a list of PDU units from SA1-3-33 to SA1-3-48, with 'Primary PDU' indicated at the bottom.

- **Network** - Using the Enable Protocols combo box, select the Network Protocol(s). Enter data for IPv4 and/or IPv6 Networking.
- **Time Servers** – Designate a time server as the source for time after each reboot (requires a network connection). As an alternative, you can manually set the time from the Administration tab, Advanced sub menu.
- **Web Access Settings** –Designate the port for accessing the PDU using a web browser and HTTP or HTTPSs.

Click on **Save**.



# SETTINGS – SNMP

**SecureArray™:**

Sort ASC ▾

IPDU2

- SA1-3-33
- SA1-3-34
- SA1-3-35
- SA1-3-36
- SA1-3-37
- SA1-3-38
- SA1-3-39
- SA1-3-40
- SA1-3-41
- SA1-3-42
- SA1-3-43
- SA1-3-44
- SA1-3-45
- SA1-3-46
- SA1-3-47
- SA1-3-48

Primary PDU

### SNMP Settings

Edit SNMP and trap related configuration properties.

Enable SNMP Access

Listen Port:

Trap Port:

Security Level:

#### SNMP V1 and V2c Settings

Read Community:  (Default: public)

Write Community:  (Default: private)

Limit Host Access

Host 1 IP Address: IPv4:  IPv6:

Host 2 IP Address: IPv4:  IPv6:

Host 3 IP Address: IPv4:  IPv6:

#### SNMP V3 Settings

USM User:

Auth Algorithm:

Auth Password:

Priv Algorithm:

Priv Password:

Context Name:

#### Send Traps To

Host 1 IP Address: IPv4:  IPv6:

Host 2 IP Address: IPv4:  IPv6:

Host 3 IP Address: IPv4:  IPv6:

#### Additional Trap Settings:


Alarm Interval:  Minutes

Log Interval:  Minutes

Log Difference:  Amps

Enter data for SNMP v1, v2c or v3 settings.  
Enter the IP Addresses you want to send traps to.  
Click on **Save** to save all entered data.

## SETTINGS – EMAILS

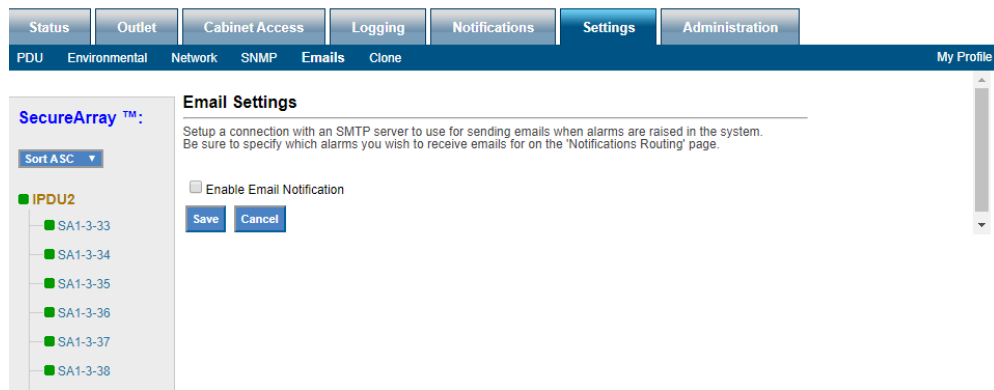

The PDU does not include a mail server. In order to provide email notifications for the PDU, you must first setup an email account for the PDU on an accessible mail server.

- **SMTP Mail Server** – the mail server where the account resides, ex: smtp.google.com.
- **Port Number** – the provider's port number, usually 465 or 25.
- Check **Use TLS** or **Start TLS** check box(es) to match your provider's encryption requirements.
- **Email address** – the email address assigned to the PDU
- If **Authentication** is required, select **Specify Credentials** from the drop-down list.
- Enter the **Username** and **Password** for the Email account.
- Select **Anonymous** if no Username and Password are required.
- Enter the email address(es) of the **Recipient(s)** (eg: your technician's email address.)
- Click on **Save** and **Send a Test Email** to make sure notification setup is correctly. The PDU must have network access to the mail server.

# ADMINISTRATION – USER MANAGEMENT

The screenshot shows the 'Administration' tab selected in the top navigation bar. Below it, the 'User Management' sub-tab is active. The main content area is titled 'User Management' and contains a 'Sort ASC' dropdown, a list of IPDU2 units (SA1-3-33 to SA1-3-48), and a 'Primary PDU' label. A 'Clone To:' dropdown is set to 'SA1-3-33' with a 'Clone' button next to it. Below this is a table with columns 'User Name', 'Group', 'Card ID', and 'Action'. The table contains one row for the user 'admin' in the 'Admin' group, with 'Edit' and 'Delete' buttons in the 'Action' column. A 'Create User' button is located below the table. A descriptive paragraph explains that users can be members of four groups: Admin, Cabinet, Viewer, and User, and that the 'Admin' group has access to every tab in the web interface.

User Name	Group	Card ID	Action
admin	Admin		Edit Delete

Click on **Create User** to add a new user.

The 'Create User' form is displayed. It includes a 'Create User' button at the top left. The form fields are: 'Username:' with an input field, 'Password:' with an input field, 'Confirm Password:' with an input field, 'Card ID:' with an input field, and 'Group:' with a dropdown menu set to 'Admin'. At the bottom of the form are 'Create' and 'Cancel' buttons.

Input the username and password and click on **Create**.

To edit an existing user. Click on **Edit** for that username.

**User Profile**

User Name:

Password:  (Leave blank to keep current password)

Confirm Password:

Card ID:

Group:

Change the necessary information. Input the Smart Card ID for the Electronic Lock Kit. If you don't know your Smart Card ID, see [Appendix](#). The same information should be input for both the Primary and Alternate PDU to assure the same logging authority will be carried through.

Click on **Save**.

To clone user from the Primary to Secure Array Members, select the PDU from the drop down and then click **Clone**. A success or failure message will come up on top.

The screenshot shows the 'User Management' section of the SecureArray web interface. At the top, there are navigation tabs: Status, Outlet, Cabinet Access, Logging, Notifications, Settings, and Administration. Below these are sub-tabs: User Management, Radius Authentication, LDAP Authentication, Advanced, and Upgrade Firmware. The 'User Management' sub-tab is active. A message at the top reads 'Users cloned to selected PDU(s)'. Below this, there is a text area explaining user groups: Admin, Cabinet, Viewer, and User. A 'Clone To:' dropdown menu is set to 'PDU Name 125', and a 'Clone' button is highlighted with a red arrow. Below the text area is a table of users:

User Name	Group	Card ID	Action	
admin	Admin		Edit	Delete
demo3	User		Edit	Delete

# ADMINISTRATION – RADIUS AUTHENTICATION

The screenshot shows a web interface for configuring RADIUS authentication. At the top, there is a navigation bar with tabs for Status, Outlet, Cabinet Access, Logging, Notifications, Settings, and Administration. Below this is a secondary navigation bar with links for User Management, Radius Authentication (selected), LDAP Authentication, Advanced, Upgrade Firmware, and My Profile. The main content area is titled "Radius Authentication" and includes a warning: "Users authenticated via Radius may have permissions defined by the Radius server or by the PDU. The Radius server should reply with Admin, User or View permission (See manual for details)." The configuration options include: "Enable Radius Authentication" (checkbox), "Use IPv6" (checkbox), "Radius Server 1" (text input), "Radius Server 2" (text input), "Radius Server 3" (text input), "Radius Secret" (text input), "Port: 1812" (text input) for each server, "Connection Test" (checkbox), "User Name:" (text input), and "Password:" (text input). There are "Save" and "Cancel" buttons at the bottom left. On the left side, there is a sidebar with "SecureArray™:" and a "Sort ASC" dropdown. Below that, a tree view shows "IPDU2" with a list of outlets from SA1-3-33 to SA1-3-41.

For network/website authentication using **Radius Authentication**, enter the necessary information and **Save**. Note that users will need to be added under the **Local User List** to have **Control** or **Admin** capabilities.

## ADMINISTRATION – LDAP AUTHENTICATION

The screenshot shows the 'LDAP Authentication' configuration page in the SecureArray web interface. The navigation bar includes 'Status', 'Outlet', 'Cabinet Access', 'Logging', 'Notifications', 'Settings', and 'Administration'. Below the navigation bar, there are tabs for 'User Management', 'Radius Authentication', 'LDAP Authentication', 'Advanced', and 'Upgrade Firmware'. The 'LDAP Authentication' section is active, showing a 'Sort ASC' dropdown and a list of eConnect units (eConnect EA-A, eConnect 1 P6, eConnect 2 P6, eConnect 3 P5, eConnect 6 P4) with an 'Alternate Primary PDU' option. The main configuration area includes a checkbox for 'Enable LDAP Authentication', a text input for 'LDAP Server URI', a text input for 'Base DN', a text input for 'Username', and a text input for 'Connection Test Password'. There are 'Save' and 'Cancel' buttons at the bottom. A help text block explains that users authenticated via LDAP will have 'Viewer' permission and provides an example URI: 'ldaps://<ipaddress>:[port]' and 'ldap://<ipaddress>:[port]' for domain 'example.com' with 'cn=users,dc=example,dc=com'.

For network/website authentication using LDAP Authentication, enter the necessary information and Save. Note that users will need to be added under the **Local User List** to have **Control** or **Admin** capabilities.

## ADMINISTRATION – ADVANCED

The screenshot shows the 'Advanced' configuration page in the SecureArray web interface. The navigation bar is the same as in the LDAP Authentication page. The 'Advanced' section is active, showing a 'Sort ASC' dropdown and a list of IPDU2 units (SA1-3-33 to SA1-3-48) with a 'Primary PDU' option. The main configuration area includes a text block explaining PDU time configuration and a 'SOFT REBOOT' button. Below that is the 'PDU Info' section with fields for 'Firmware: 4.10.678', 'Configuration ID: P6-4A163-C1D', 'Serial Number:', and 'MAC Address: 00:0E:D3:00:FF:45'. The 'Time and Date Settings' section includes 'Browser date and Time: Thu, 07 Nov 2019 20:41:21 UTC' with a 'Sync PDU Time' button, and 'PDU Time in UTC' with dropdowns for 'Time: 20 Hrs 41 Mins 54 Secs' and 'Date: 7 Nov 2019'. There are 'Save' and 'Cancel' buttons. The 'Factory Defaults' section has radio buttons for 'Reset Network', 'Reset Configuration', 'Reset Users', and 'Reset All', with an 'APPLY DEFAULTS' button at the bottom.

PDU Info includes serial number and MAC address. Model number and firmware version are also displayed in the gray summary box at the top of each screen.


Verify the **Time** and **Date Settings** to ensure date/time stamps on logs and alarms are correct.

**Soft reboot** restarts the network connection, but does not power down outlets. Use this if you have connection problems.



**Factory Defaults** reset customer-entered values to the original factory defaults:

- **Reset Network** – Resets the PDU Network information to factory defaults including IP address (192.168.123.123). You may lose your network connection.
- **Reset Configuration** – Resets the PDU Configuration information to factory defaults including PDU name, alarms thresholds, etc. You will lose all configured fields.
- **Reset User** – Deletes all users except the single factory default admin user. Login will be reset to admin, admin and this user will have full admin capabilities.
- **Reset All** – Resets all fields to factory defaults.

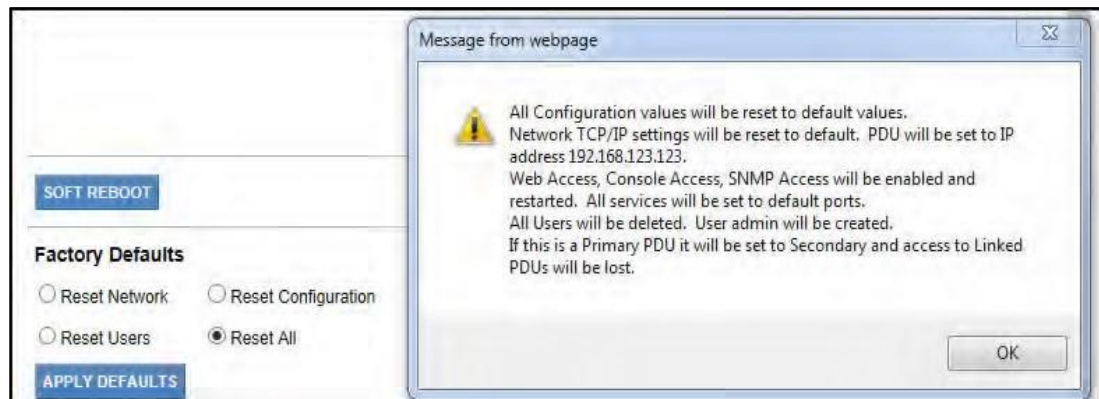

To reset to factory defaults, select the appropriate radial button.

Review the warning message.

Click the **Apply Defaults** button to apply selected defaults. Resets are applied immediately.

## ADMINISTRATION – UPGRADE FIRMWARE

The screenshot shows the 'Upgrade Firmware' page in the SecureArray administration console. The top navigation bar includes tabs for Status, Outlet, Cabinet Access, Logging, Notifications, Settings, and Administration. Below this, a secondary bar lists 'User Management', 'Radius Authentication', 'LDAP Authentication', 'Advanced', 'Upgrade Firmware', and 'My Profile'. The main content area is titled 'Upgrade Firmware' and contains the following elements:

- A 'Sort ASC' dropdown menu.
- A list of PDU units under 'Primary eConnect PDU': eConnect 1 P6, eConnect 2 P6, eConnect 3 P5, eConnect 4 P4, eConnect 5 P3, eConnect 6 P3, and eConnect EA-A.
- Buttons for 'Primary PDU' and 'Alternate Primary PDU'.
- Text: 'The version of firmware installed on this unit is listed in the gray box above.' and 'The unit can be upgraded via HTTP, FTP, or TFTP. To initiate an upgrade, select the appropriate radio button, specify the appropriate fields, and click the 'Upgrade' button. The 'Test' button can be used to verify connectivity to the HTTP, FTP, or TFTP server.'
- 'Upgrade Option:' section with radio buttons:
  - Upgrade this PDU via Network
    - HTTP or FTP: URL: [text box] (eg: http://192.168.100.1/cpiack.bin)
    - TFTP: Server IP: [text box] Filename: [text box]
    - File: [Choose File] No file chosen
  - Upgrade Linked PDUs (patch file size: 26330113)

Buttons for 'Test', 'Upgrade', and 'Cancel' are located below the radio button options.

Copyright © 2020 Chatsworth Products, Inc. All Rights Reserved. Version 1.21 Last Updated: 2020-08-18 20:50

Post the downloaded firmware to an accessible HTTPS/FTP or TFTP directory or to a directory on a computer on the same network subnet as the PDU.

For HTTPS/FTP or TFTP upgrade, enter HTTPS/FTP or TFTP data. Click on **the Test** button to assure the remote site can be reached. Click on the **Upgrade** button to perform the upgrade.

For File upgrade, browse to the file and select the file (.bin). Click on **the Test** button to assure the computer can be reached. Click on the **Upgrade** button to perform the upgrade.

To upgrade the secondary PDU(s), select radial button Upgrade Linked PDUs and select the PDU to be upgraded.

Click on **the Test** button to assure the computer can be reached. Click on the **Upgrade** button to perform the upgrade.

*Note: This process runs in the background, can be unattended and the upgrading PDU(s) will still be fully functional while upgrading. However, this may take several hours depending on the number of devices in the Secure Array and amount of network traffic.*

After successful installation, the new firmware version will display in the PDU Info box at the top of the screen.



Feedback to the WebUI when attempting a FW Update with a bad FW Update image:

The screenshot shows the 'Upgrade Firmware' page in a web interface. At the top, there is a navigation bar with tabs for 'Status', 'Outlet', 'Cabinet Access', 'Logging', 'Notifications', 'Settings', and 'Administration'. Below this is a sub-menu with 'User Management', 'Radius Authentication', 'LDAP Authentication', 'Advanced', and 'Upgrade Firmware'. The main content area is titled 'Upgrade Firmware' and contains the following text: 'The version of firmware installed on this unit is listed in the gray box above.' and 'The unit can be upgraded via HTTP, FTP, or TFTP. To initiate an upgrade, select the appropriate radio button, specify the appropriate fields, and click the 'Upgrade' button. The 'Test' button can be used to verify connectivity to the HTTP, FTP, or TFTP server.' Below this text is a red oval containing the error message: 'Failed to verify file and/or upgrade PDU'. Underneath the error message is the 'Upgrade Option:' section, which includes a radio button for 'Upgrade this PDU via Network'. This section has three sub-options: 'HTTP or FTP' with a 'URL:' field (example: http://192.168.100.1/cpipack.bin), 'TFTP' with 'Server IP:' and 'Filename:' fields, and 'File' with a 'Choose File' button and 'No file chosen' text. At the bottom of the form are three buttons: 'Test', 'Upgrade', and 'Cancel'.

Please ignore the Force option.

The FW Update process will validate the individual FW files against their MD5 checksums. Any validation failure will result in the FW running at that time, remaining intact.

## CONFIGURE IP ADDRESS USING SERIAL CONNECTION AND CLI

The PDU has IPV4 network and DHCP enabled as defaults.

You can change network settings through the [display on the PDU](#), the [built-in GUI](#) or CLI.

To configure the PDU using a serial connection and CLI, follow the steps below:

1. Using the YOST Serial cable with the DB9 to USB converter to connect the PDU to the laptop.

- RJ45 end to the Console1 port on the PDU
- USB end to the USB port on the laptop

2. Run a SSH Client on the laptop.

To identify the assigned IP address:

- Log into the PDU with name= admin, password= admin
- Type: **elevate twice** to get to admin level.
- Type: **config-get network-ipv4 enabled 0** to obtain the IPV4 enabling status.
- Type: **config-get network-ipv4 dhcp-enabled 0** to obtain DHCP enabling status.
- Type: **config-get network-ipv4 ip-address 0** to obtain IP address of the PDU.
- Type: **config-get network-ipv4 subnet-mask 0** to obtain subnet mask of the PDU.
- Type: **config-get network-ipv4 default-gateway 0** to obtain default gateway of the PDU.

To change network settings:

- Type: **config-set network-ipv4 enabled 0 1** to enable IPV4 if needed.
- Type: **config-set network-ipv4 dhcp-enabled 0 0** to disable DHCP if needed.
- Type: **config-set network-ipv4 ip-address 0 192.168.123.123** to set ipv4 ip address to 192.168.123.123 or insert a different ip address, if needed.
- Type: **config-set network-ipv4 subnet-mask 0 255.255.255.0** to set ipv4 subnet mask to 255.255.255.0 or insert a different subnet mask, if needed.
- Type: **config-set network-ipv4 default-gateway 0 192.168.123.1** to set ipv4 default gateway to 192.168.123.1 or insert a different default gateway, if needed.

## **BUILT-IN SOFTWARE FEATURES**

### **USING APPLICATION PROGRAMMING INTERFACE (API)**

Refer to this link to get API instructions: [www.chatsworth.com/en-us/power-management/resources/design-tools/software](http://www.chatsworth.com/en-us/power-management/resources/design-tools/software)

### **USING COMMAND LINE INTERFACE (CLI)**

The Command line allows you to make a direct connection to the computer. You'll need a console serial cable to connect between the computer and the PDU ([Go to Product Features](#) for console location on PDU controller module). Refer to this link for a list of commands: ([www.chatsworth.com/en-us/power-management/resources/design-tools/software](http://www.chatsworth.com/en-us/power-management/resources/design-tools/software))

### **USING ZERO TOUCH PROVISIONING (ZTP)**

The Zero Touch Provisioning (ZTP) feature allows a user to automate the configuration of a PDU with network access when PDUs are configured using DHCP server. This is accomplished via ethernet connection to a DHCP server and a repository server that is accessible via HTTP, FTP, or TFTP. Refer to this link to get ZTP instructions: [www.chatsworth.com/en-us/power-management/resources/design-tools/software](http://www.chatsworth.com/en-us/power-management/resources/design-tools/software)

## TROUBLESHOOTING GUIDE

### Local display is blank:

- Check the PDU status LED.
- Make sure the PDU is plugged into a live source.
- Timeout feature might be activated, press the middle button.

### Receptacle has no power:

- Check the circuit breaker for the branch. If necessary, switch it off then back on and recheck. (Note that all equipment connected to the branch will lose power.)
- Check power at the source.
- If problem persists, the Controller Module must be replaced. (See **Replacement Instructions** [here](#))

### PDU cannot establish Link to another PDU:

- Verify that proper cable is used to interface PDUs, use a standard Cat 5/6, 4-pair network cabinet with RJ45 connectors on both ends.
- Make sure the connectors are snapped in securely.
- Verify the integrity of the cable.
- If problem persists after a power cycle, the Controller Module must be replaced. (See **Replacement Instructions** [here](#))

### PDUs in the Secure Array are not displaying in the interface:

- Verify that the PDU models are compatible.
- Models with auxiliary ports will only connect to models that support Gigabit Ethernet.

### PDUs in the Secure Array are not displaying data that is appropriate to their level of functionality:

- Verify that the PDUs assigned to the PRIMARY and ALTERNATE roles are represented by the units with the highest level of functionality within the array.
- If the problem persists, verify that the units in the PRIMARY and ALTERNATE roles have the highest number of outlets within their functionality.

### No Ethernet Connection:

- Verify connection with a ping tool from any computer in the network.
- Check that the green LED in the PDU Ethernet port is lit.
- Check that the end connectors are snapped in place.
- Check the integrity of the cabling from the PDU's Ethernet port to the network switch/hub/router.
- Verify the port integrity of the network switch/hub/router.
- Verify via serial port that the network configurations for the PDU are set properly.

- If the Ethernet communication problem persists after power cycling it, the Controller Module must be replaced. (See Replacement Instructions [here](#))

### **For eConnect PDU with Electronic Lock Kit installed:**

#### **Lock issue**

##### **If lock status shows as “Not Configured” or “Lost Communication”**

- Check the cable that is connecting the lock to the CAN bus module for continuity.
- Check the cable that is connecting the CAN bus module to the PDU for continuity.

##### **If lock status shows as “Unlocked”**

- Check that the lock is locked using the appropriate mechanical key
- Check the cable that is connecting the lock to the CAN bus module for continuity.

#### **Door issue**

##### **If door status shows as “Not Configured” or “Lost Communication”**

- Check the cable that is connecting the door sensors with the CAN bus module for continuity.
- Check the cable that is connecting the CAN bus module to the PDU for continuity.

##### **If door status shows as “Open” while the door is closed:**

- Check that the door magnets are aligned properly.

Check that the cable that is connecting the door magnets with the CAN bus module for continuity.

#### **Customer Support:**


US Tech Support: 1-800-834-4969 • [techsupport@chatsworth.com](mailto:techsupport@chatsworth.com)

## REPLACING THE FIELD-REPLACEABLE CONTROLLER MODULE

### **Notice**

For most current information, refer to the installation instructions included with the module.

### **Safety Information**

	<b>WARNING:</b> Improper use of this product may lead to serious injury or death. Read and understand all instructions for proper installation and use of this product.
---	---

### **Installation Guidelines**


- While the Field-Replaceable Controller Module (MCM) can be replaced while the PDU is still powered, to reduce risk of electrical injury, disconnect input power to the PDU before servicing.
- Service personnel should use an anti-static strap and follow other proper anti-static practices while performing service on the MCM.

### **Notes**


- **Service Personnel** – Only qualified service personnel should install, access, or service this equipment.
- **SD Card** – For full and proper functionality, replace the SD card in the new MCM with the SD card from the old MCM prior to installing the new MCM. Failure to properly swap SD cards will result in loss of functionality until completed.
- **MAC Address** – After replacing the MCM, the Serial Number of the PDU will remain the same (shown on PDU label), but the MAC address will be different. If the PDU is in a Secure Array, being monitored by DCIM software, the OIDs of any monitored data will need to be updated with this new MAC address.

## **Service and Maintenance**

1. Disconnect power from the PDU.
2. Unfasten the controller hold down screw using a T10 hexalobular driver.
3. On vertical PDUs, Pivot the controller away from the face of the PDU, taking care not to put tension on the connected ribbon cable, and disconnect the CAN Bus connector. On horizontal PDUs, slide the controller straight out from its mounting slot and disconnect the CAN Bus connector.

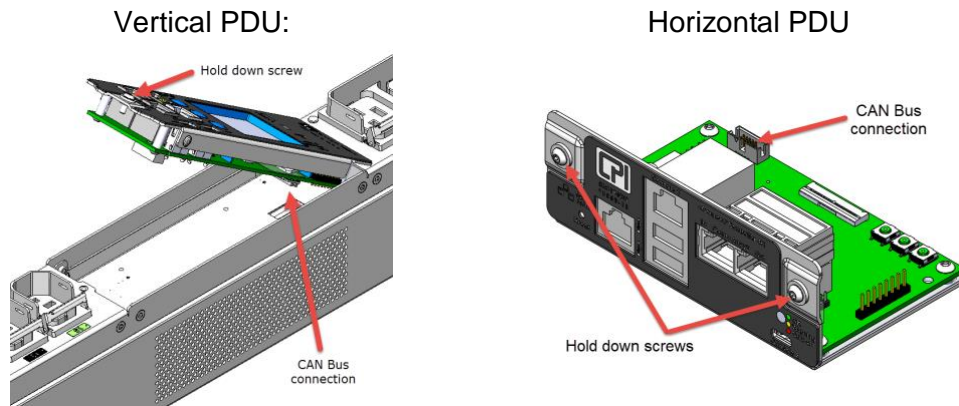

4. After the CAN Bus connector is removed, the controller can be completely removed.
5. To transfer PDU identity, configuration, and settings for the PDU, swap the SD card on the rear of the controller board from the old controller to the new controller. Remove SD Card replacement notification label and press in on installed SD card to release and remove. Install new SD card. Note that the SD Card does not transfer log data.

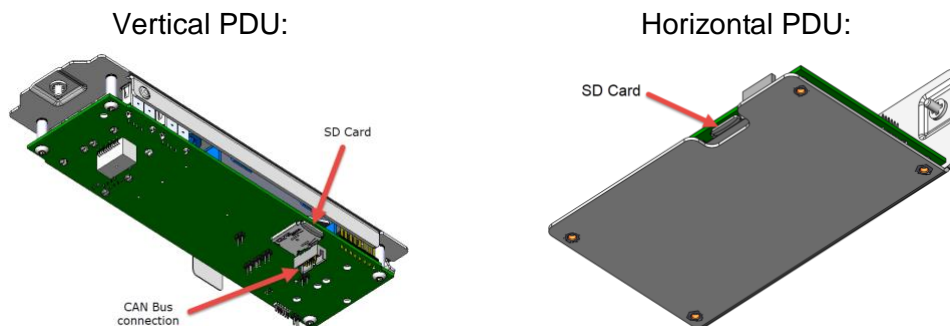

6. Reconnect CAN Bus connector to new controller.
7. Place controller back in its mounting location and fasten the hold down screw. As you reinstall the controller for the vertical PDU, rotate the controller down to ~45 degrees and guide the CAN Bus cable with your finger to ensure the cable goes into the slot provided below the controller within the PDU.

## APPENDIX

### Regulatory Information:

CE

FCC Part 15, Class A

EN 55022

RoHS Compliant

UL &cUL Listed IEC

62368

Operating Temperature: 32 - 149°F (0 - 65°C) at Input Power Rating (kW) Operating non-condensing relative Humidity: 5 - 95%

Operating Elevation: 0-10000 ft (0-3000 m)

Storage Temperature: -13 - 149°F (-25 - 65°C)

Storage Relative Humidity: 5 - 95%

Storage Elevation: 0-50000ft (0-15000 m)

The Technical Construction File is held by CPI.

## APPENDIX for Electronic Lock Kit for eConnect

### Assigning a Smart Card ID

As discussed in the section **Administration – User Management** (page 50), each user may be assigned a unique smart card ID associated with their account that allows the PDU to unlock the Electronic Lock Kit mechanism (if installed) when a smart card is presented to the cabinet door lock. If the smart card ID is not known, there are two methods that can be used to interrogate the card electronically, in order to retrieve the smart card ID, and enter it into the eConnect system.

The first method utilizes the eConnect card reader and the event-logging system described in the **Logging – Overview** section of this manual to acquire the smart card ID.

Whenever a smart card is presented to Electronic Lock Kit, the key ID is read off the card, and then is compared to all key IDs known by the eConnect system. If the key ID is unknown, an entry is appended to the syslog to show that cabinet access has been attempted by an unknown user. The log entry includes the unknown smart card ID. The smart card ID can then be read from the syslog, and then entered into a user profile.

To easily copy the card ID from the syslog, double click the last set of characters on the pertinent log entry with the left mouse button to highlight it, then click the right mouse button and select **Copy** (or press **Ctrl-C** on the computer keyboard) to copy the characters to the windows clipboard.



## Syslog Entries

Time (UTC)	Entry
Feb 9 19:05:07	[PDU Cabinet]:[P6 lock tester]:[Audit] User admin logged in on the web GUI interface.
Feb 9 19:04:34	[PDU Cabinet]:[P6 lock tester]:[Audit] Front Door has encountered a failed access attempt. Card ID was <b>caa4b301f8ff12a4</b>

Next, find the user that will be associated with this card, or create a new user if necessary and add the username and password and click save. Change the Group association for this user to the cabinet, place the mouse cursor on the Card ID text box and left click once, then paste the smart card ID in with mouse right-click **Paste** (or via the keyboard by pressing **Ctrl-V**). Be sure to press the **Save** button to save the smart card ID.


From this point forward, the smart card ID will be known to the system and associated with the user. Note that once the card ID is into the system, it will no longer be displayed in the syslog entry for security purposes.

**Create User**

---

**User Profile**

User Name:

Password:   (Leave blank to keep current password)

Confirm Password:

Card ID:

Group:  ▼

The second method to interrogate an unknown smart card is to utilize the pcProx® Plus external card reader, CPI part number 36653-001, and a windows-based computer that is logged on to the eConnect web interface. The external card reader plugs into any available USB port on the computer and will generate “keystrokes” when a card is presented. Thus, the user places the mouse cursor on the Card ID text box, and when the card is presented to the external reader, the smart card ID characters are injected into the text box automatically, as if they were entered manually with a keyboard.

The external USB card reader does require software to be downloaded from the third-party vendor’s website, and configured to the type of smart card intended to be used on the system.

**NOTE:** At the time of writing of this manual, configurations have been tested for card types DesFire, HiD, iClass®, MIFARE and Prox cards. Other types of cards may be used with this reader, although some changes may need to be made to the external card reader settings so the key codes are correct. A comparison could be made between the syslog entry method described above to find the proper settings that provide a match for that family of cards. From that point forward, no changes to the external card reader’s configuration should be required to enroll more cards of the same type.


### **Preparation**

To configure the pcProx® Plus card reader, you must have the pcProx® Configuration Utility installed on your computer, which is available at

[www.rfideas.com/support/product-support/pcprox-plus](http://www.rfideas.com/support/product-support/pcprox-plus)

Click on the link above and save the resultant zip file to a directory on the computer. Unzip the contents of the zip file and click on the file pcProxConfig.exe (be sure the PC user has Administrator privileges to install programs). The pcProx® Configuration Utility will be installed with a start menu shortcut at **RF IDEas -> PCProx5 -> pcProxConfig.exe**


Plug in the pcProx® Plus card reader into an available USB port. Run the program PcProxConfig from the Windows start menu, click **Use USB ports**, and select the **Connect** button in the upper left of the screen to associate the program to the external reader.

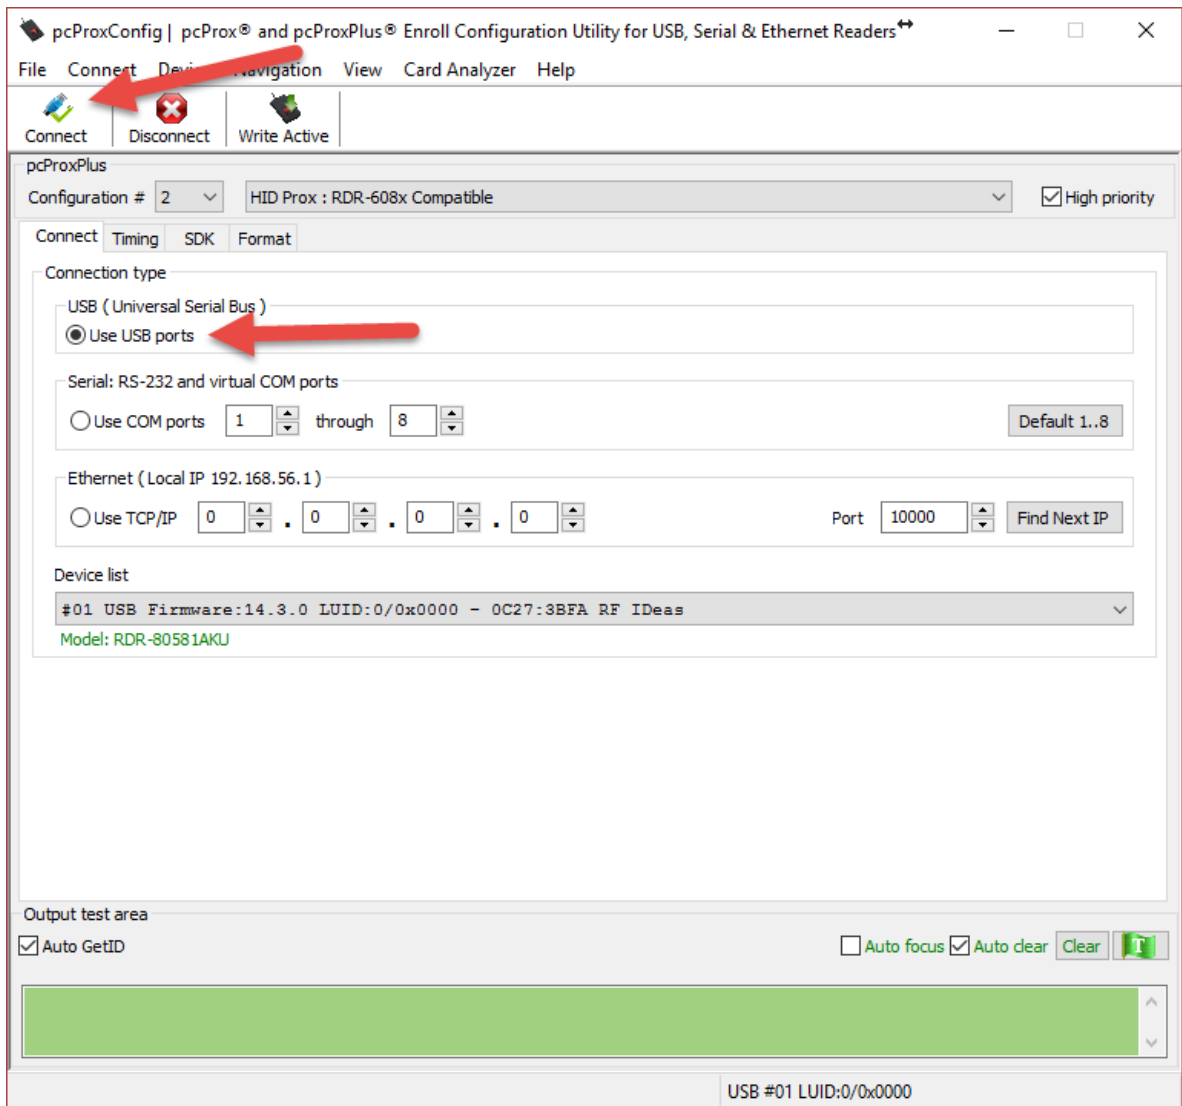


## Determining what Card Profile to use

The pcProx® Plus Card enrollment reader must be tailored to the **RFID Card Type** that will be used with the Electronic Lock Kit system. If the card type is one of the Desfire, HiD iClass, Mifare Classic or Prox, please proceed to **Programming the pcProx® Plus reader** on page 83.


If the RFID card type is not known, the “**Card Analyzer**” Wizard, found under the “Card Analyzer” menu of the pcProxConfig program, can be used to scan for the Card Type:

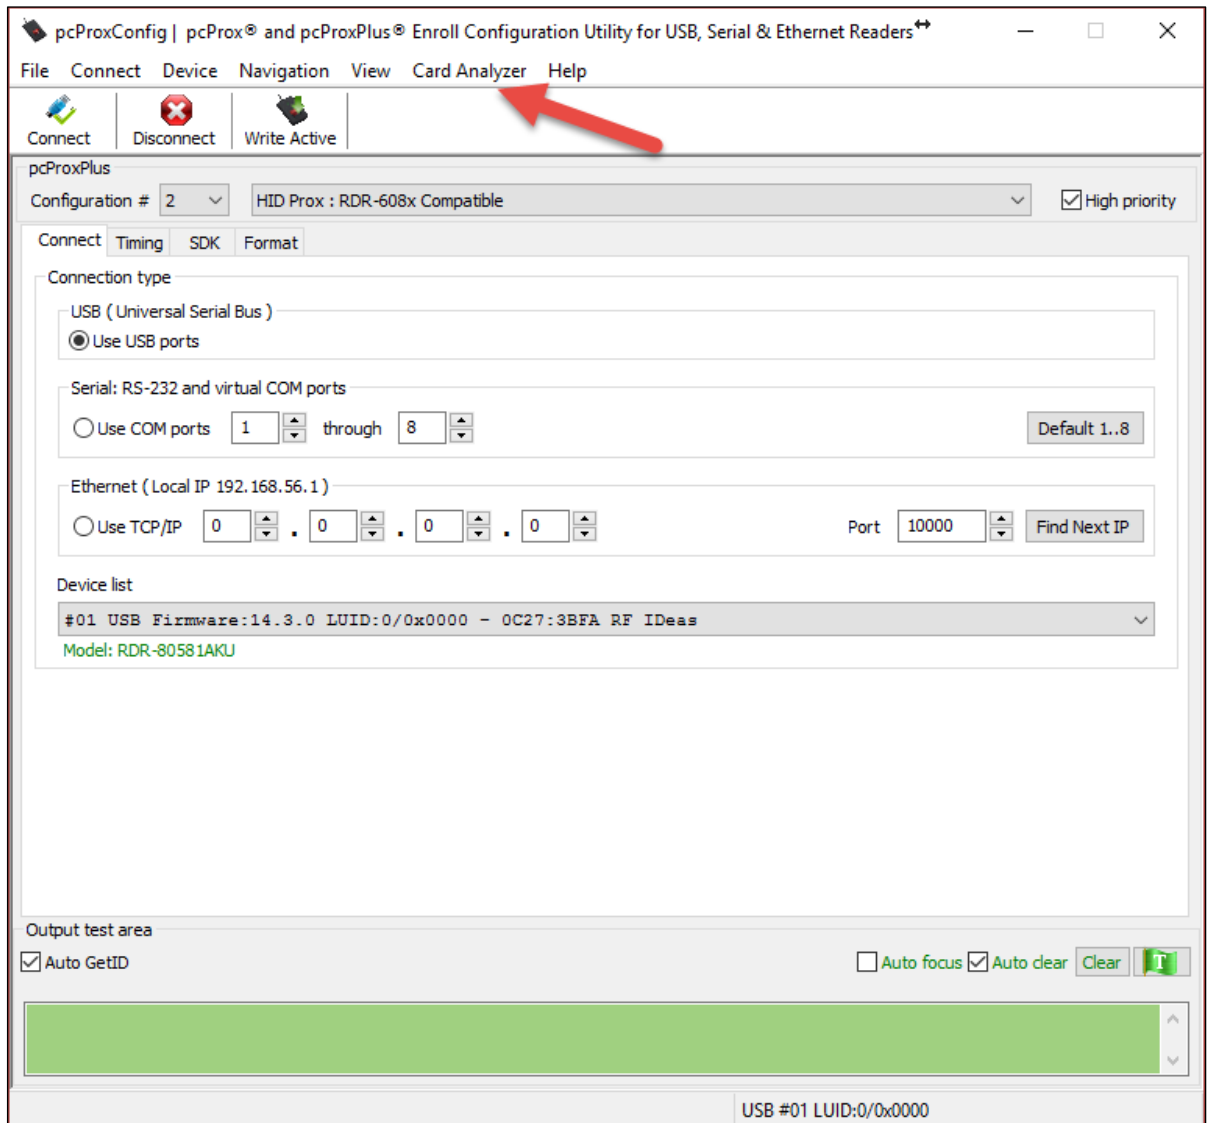

After selecting Card Analyzer from the menu, place the ID card on the reader and press the Learn Card button:

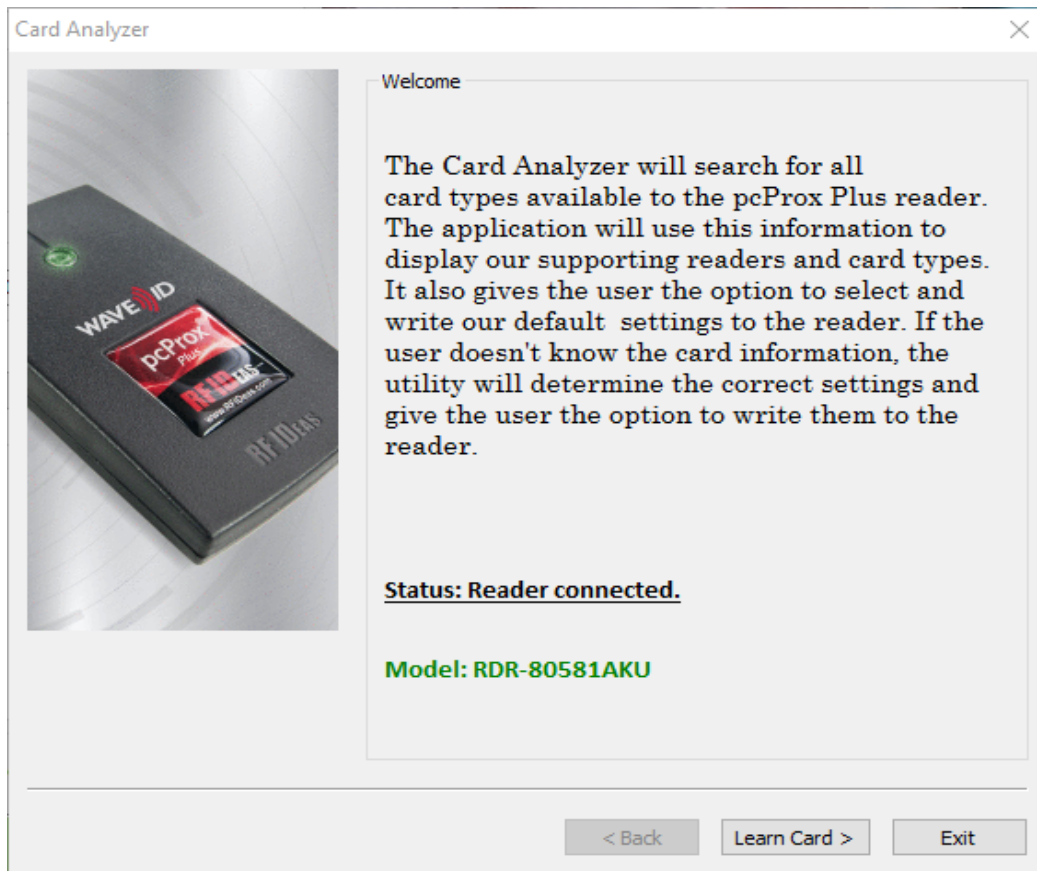

The reader will then scan through several card types. When a compatible card type is found the **Card Type** box will show the type of card.

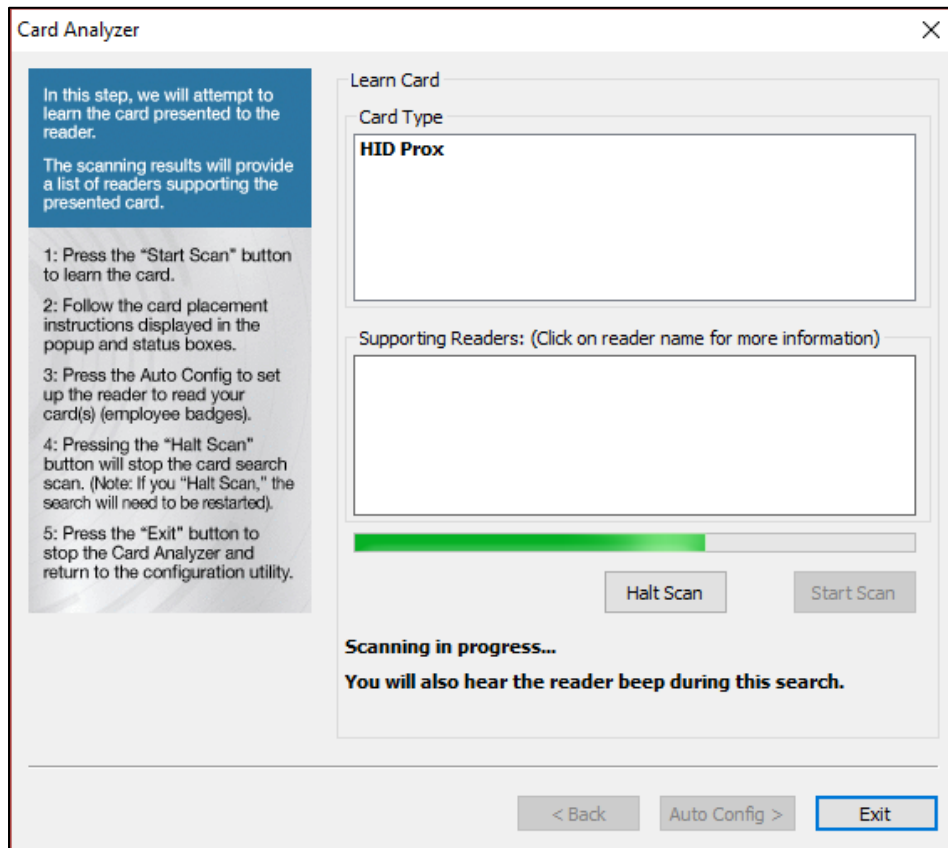


After determining the type, the user is ready to write the proper settings to the pcProx® Plus reader.

### Programming the pcProx® Plus reader


In order for the pcProx® Plus reader to be compatible with the Electronic Lock Kit, the card reader must be flashed with the proper reader settings, as shown in the following steps:

The **Card Type** must be set from the drop-down selector on the **Format – Data Format** tab page. Additionally, the other fields and checkboxes on that page should initially be configured as shown below. Three advanced settings shown within a red rectangle must be checked or unchecked, depending on the **Card Type**. After all the settings have been made press the **Write Active** button to write the settings to the pcProx® Plus reader.

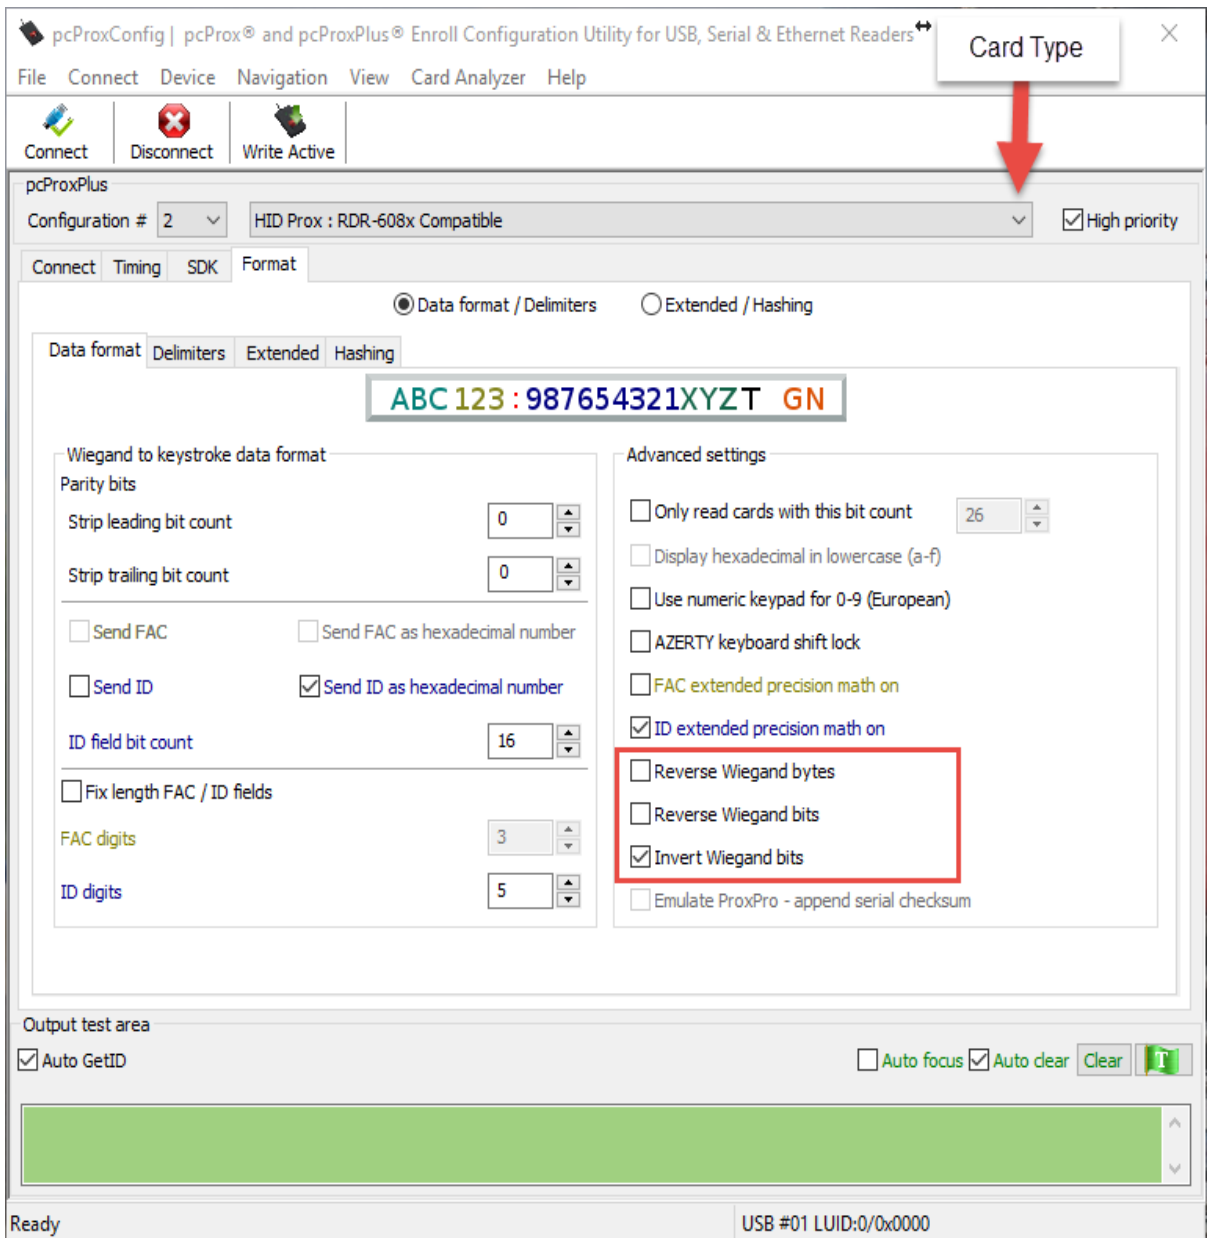


# Common RFID Card Types and Reader Format Settings

## Desfire Card:

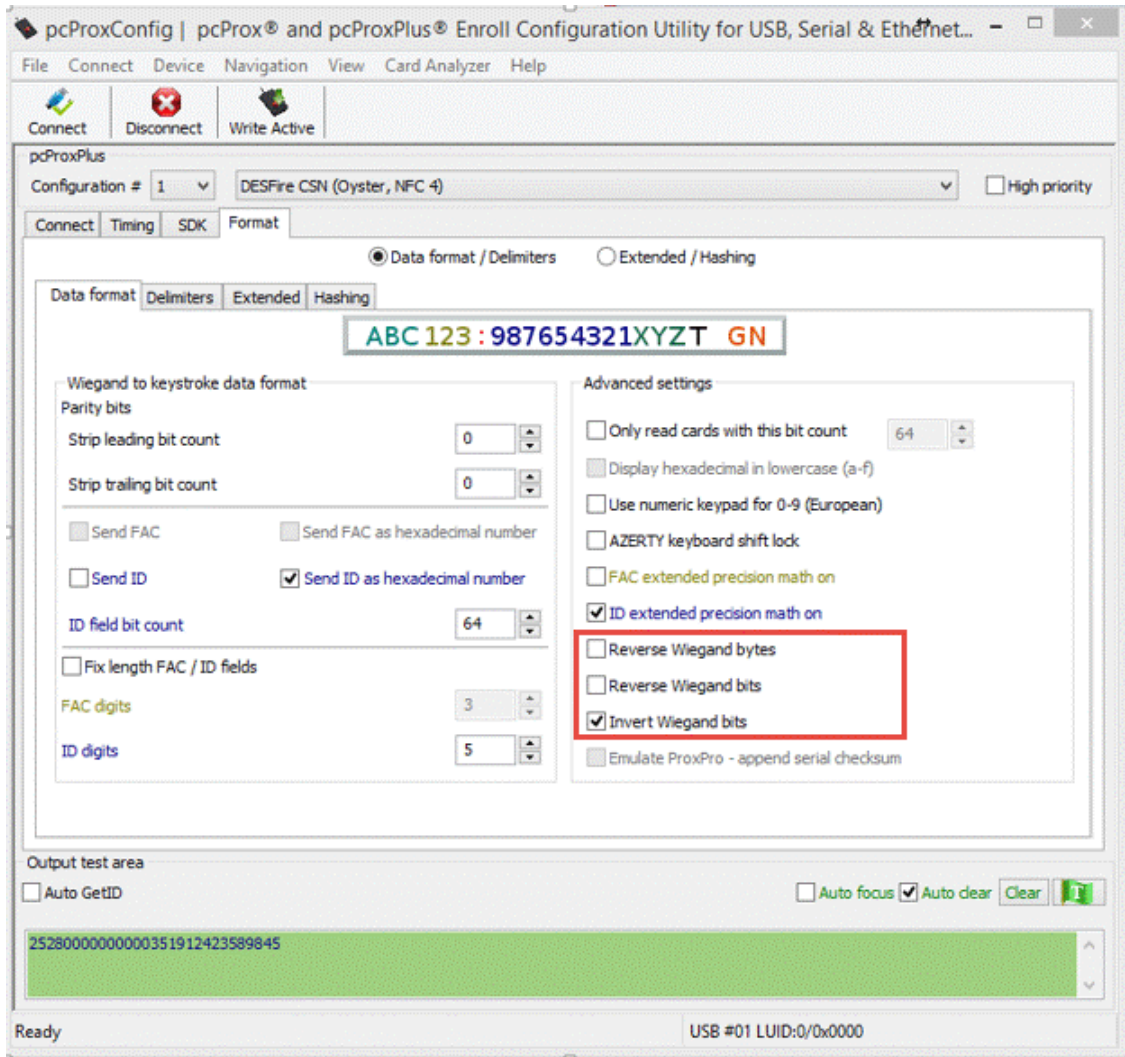




## HiD iClass Card:

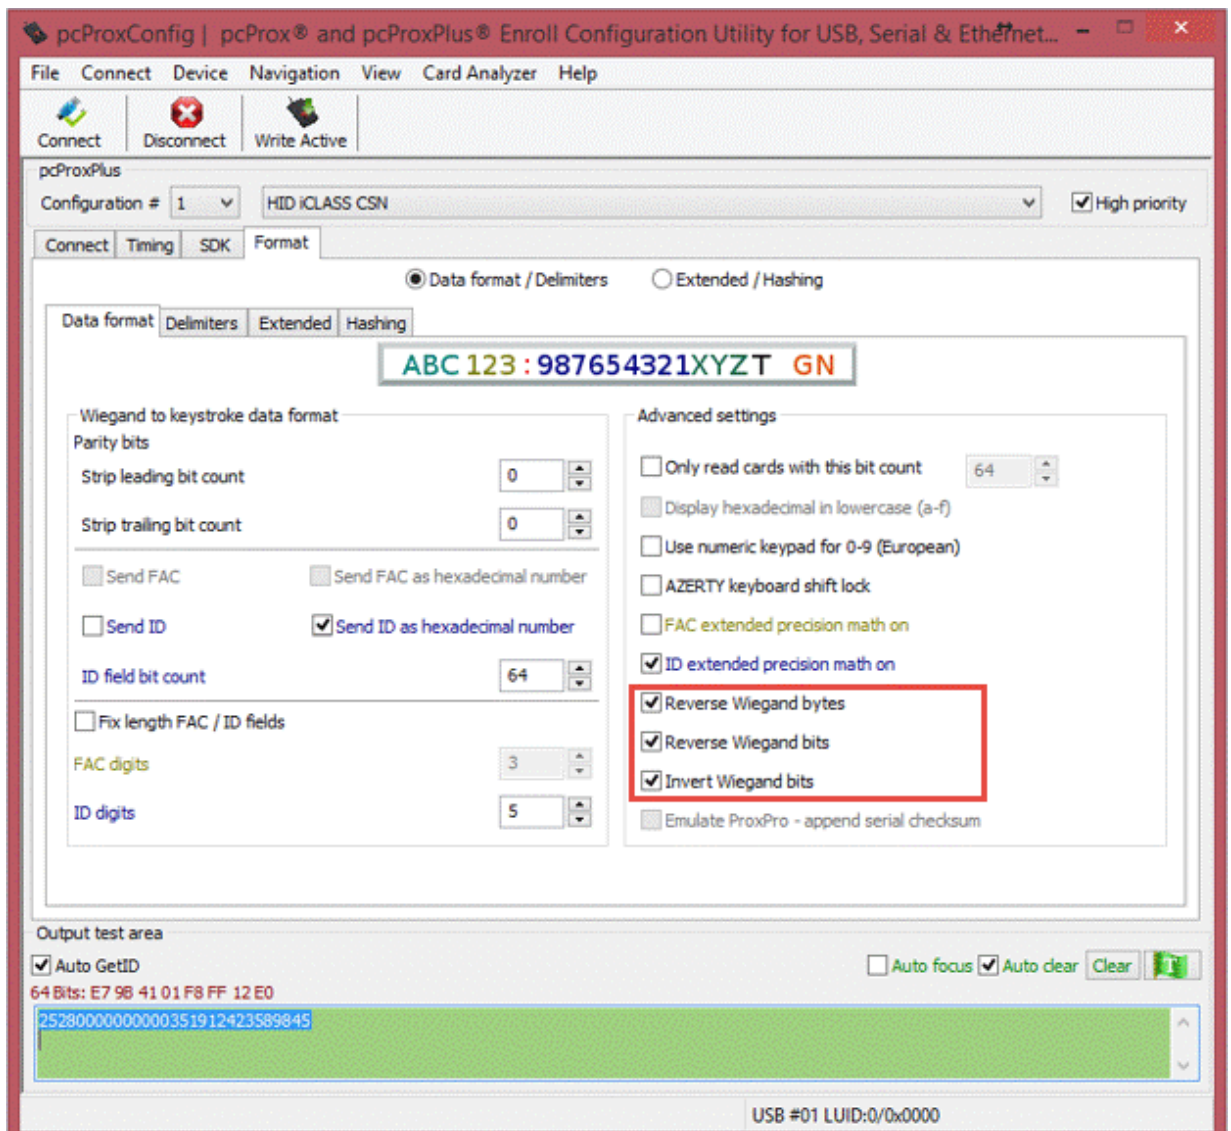

## MiFare Classic Card:

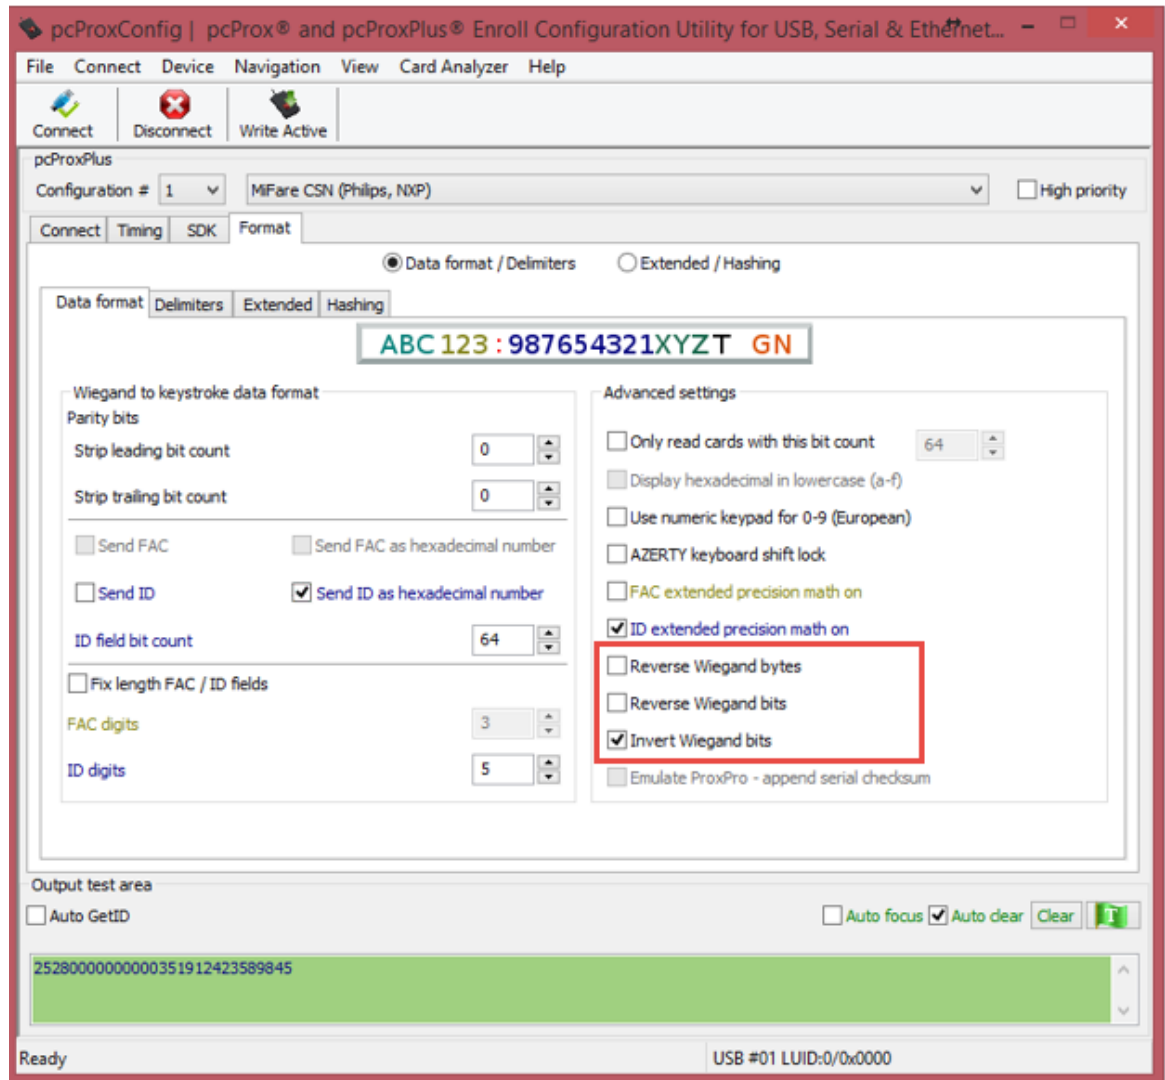

## Prox Card:

Prox cards require an additional settings in the **Wiegand to keystroke data format** box, as shown below:

