

# Installation Instructions

## RMR MODULAR GLAND BOTTOM PANEL

### Safety Information



**WARNING:** Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

### Tools Required


M10 Nut Driver

### Included Hardware

- (4) M6 hex nut
- (4) Bottom clamp bracket

### Assembly Sequence

1. Place the cabinet over the bottom panel. Orient grounding stud adjacent to front door.
2. Install (4) clamp brackets as shown using M6 hex nuts positioned toward side panel. Torque to 88in-lb [9.9N-M]

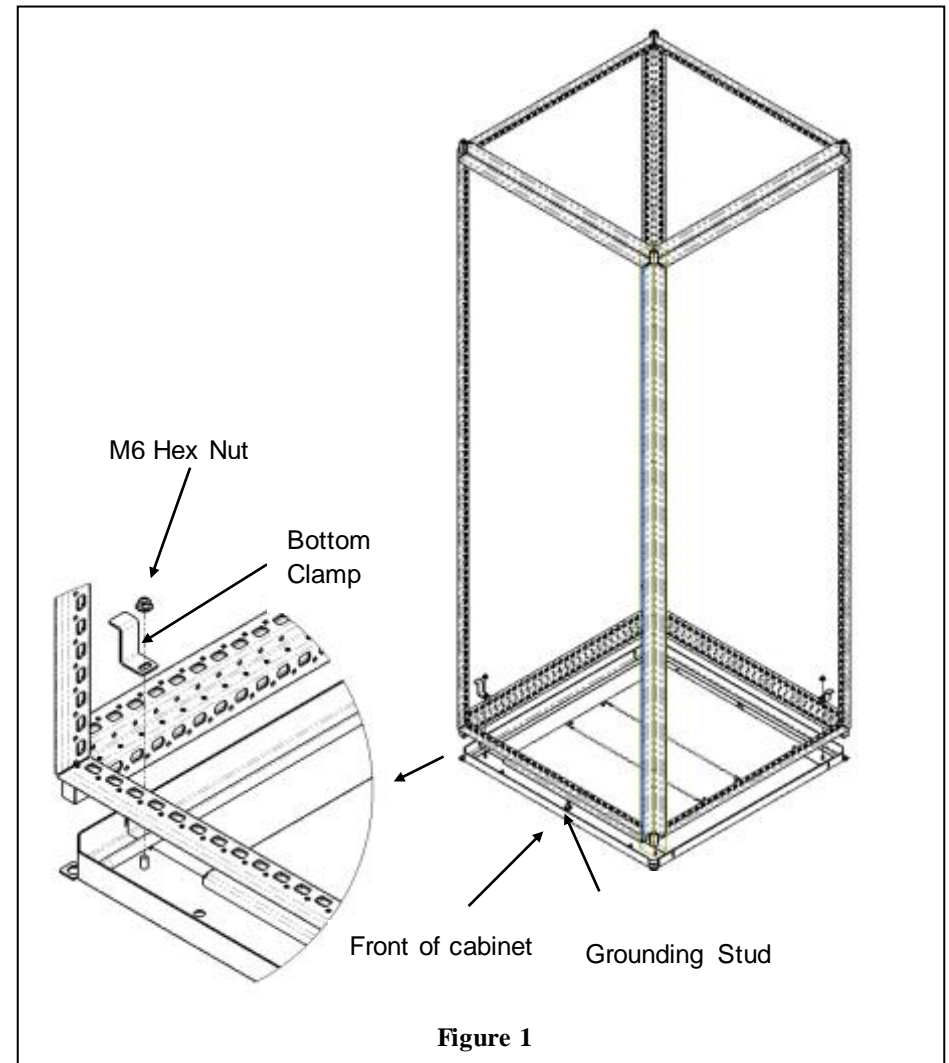

IIS-737790, 08/31/16, Rev. 1, CPI/REL  
800-834-4969 (USA & Canada) • [www.chatsworth.com](http://www.chatsworth.com) • [techsupport@chatsworth.com](mailto:techsupport@chatsworth.com)  
For international phone numbers, see our website or contact CPI Tech Support.

*This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.*