
## **Busbar Assemblies with Lug Nuts**

Busbar Assemblies With Lug Kits contain the CPI 13622 series Secondary Bonding Busbar (SBB) or the CPI 40153 series Primary Bonding Busbar (PBB) along with required stainless steel hardware to fasten the two-hole ground lugs to the Busbar.

- #6 lugs are 2-hole lugs with 1/4" hardware
- #2, 2/0 and 4/0 lugs are 2-hole lugs with 3/8" hardware



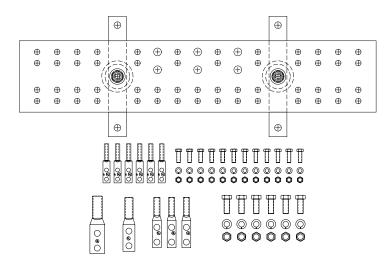

Shown: 40158-020

## **ORDERING INFORMATION**

Part Number	Description	Busbar Size H x W x D in (mm)	#2 Lug	#6 Lug	2/0 Lug	4/0 Lug	Shipping Weight Ib (kg)
40156-012	SBB Pattern	2 x 12 x 1/4 (50 x 300 x 6.4)	3 each	6 each	1 each	0 each	5 (2.3)
40158-020	PBB Pattern	4 x 20 x 1/4 (100 x 510 x 6.4)	3 each	6 each	1 each	1 each	11 (5.0)
40158-012	PBB Pattern	4 x 12 x 1/4 (100 x 300 x 6.4)	3 each	6 each	1 each	1 each	8 (3.6)

Note: Busbars are 1/4" (6.4 mm) thick.

Toronto, Ontario, Canad +905-850-7770

## Europe Buckinghamshire, UK +441628524834

+971-4-2602125

Middle East & Africa

Doha, Qatar +974-4-267422 **Latin America** +52-55-5203-7525 Toll Free within Mexic 800-201-7592 Asia Pacific +86 21 6880-0266 chatsworth.com.cn

