

# Installation Instructions

## RMR FULL HEIGHT PDU BRACKET ASSEMBLY

### Safety Information



**WARNING:** Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

### Tools Required

#2 Philips screw driver


### Included Hardware

(4) M6 Drop-in nut

(4) M6 Flat Head screw

### Assembly Sequence

1. Insert M6 drop-in nuts into Double-D Cam Holes on top and bottom frame depth members at desired location for PDU mounting bracket. Rotate M6 drop-in nut 90 degrees to engage frame.
2. Install PDU mounting bracket onto frame using M6 screws (torque 168 IN-LB [19 N-M]).

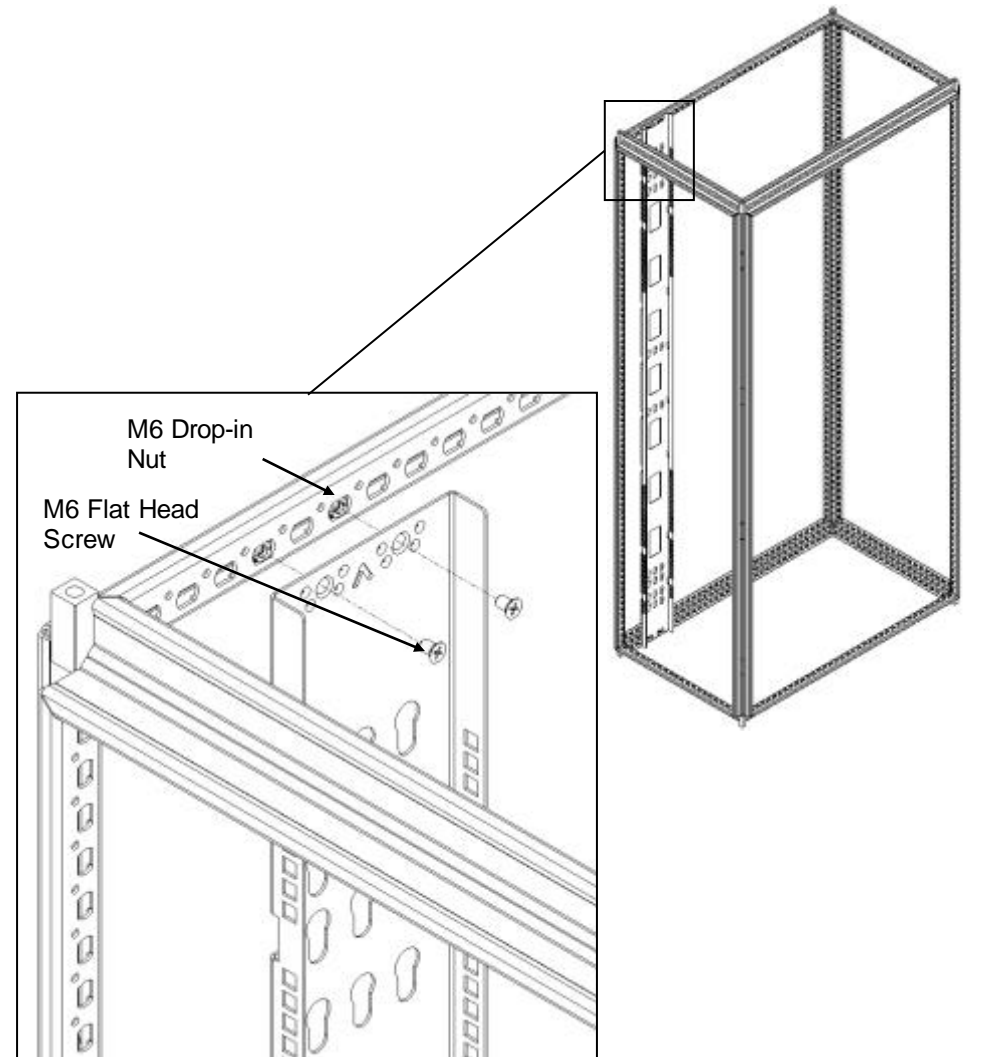

IIS-737808, 07/21/16, Rev. 1, CPI/JAG

800-834-4969 (USA & Canada) • [www.chatsworth.com](http://www.chatsworth.com) • [techsupport@chatsworth.com](mailto:techsupport@chatsworth.com)

For international phone numbers, see our website or contact CPI Tech Support.

*This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.*